



MOTOMANUAL

 
MOTORAZR™ maxx V3
3G

USER MANUAL


www.motorola.com.hk

Welcome

Introducing your new **MOTORAZR™** maxx V3 3G wireless phone. Here's a quick anatomy lesson.

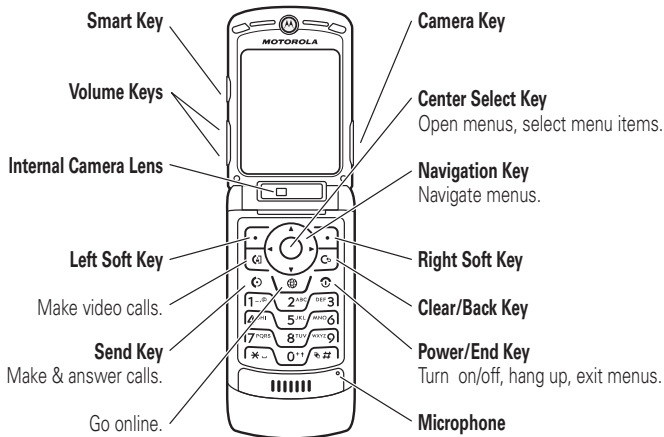

 
Note: All the illustrations, simulated screen and related images used in this manual are for reference only. There may be slight difference between the handset and keys and content of display used in this manual and those of your handset. Please refer to your handset for actuality.

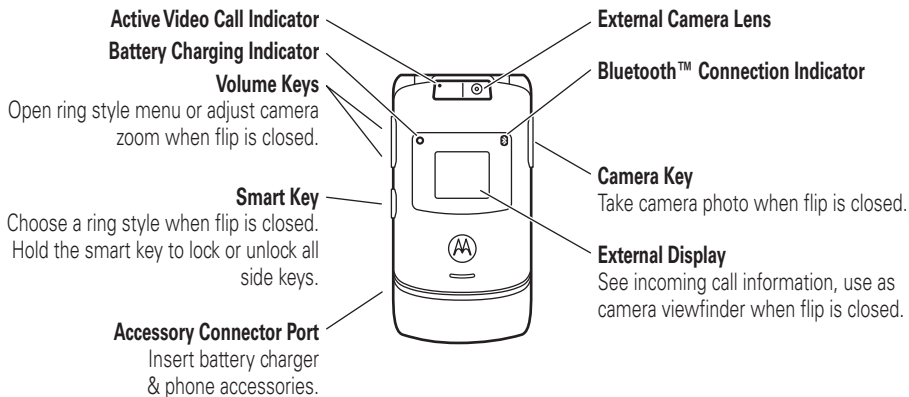

Note: All the illustrations, simulated screen and related images used in this manual are for reference only. There may be slight difference between the handset and keys and content of display used in this manual and those of your handset. Please refer to your handset for actuality. The display of the softkeys may be different if you subscribe SCREEN3™ service. SCREEN3™ is a subscription-dependent feature and is not available in all regions. Please contact your service provider for more details. After activating SCREEN3™, you may not be able to use st to open the Menu. Please use the right soft key to open it.

 
Home Screen



1 Press and hold the **Power Key**  for a few seconds or until the display lights up to turn on your phone.

2 Press the **Center Key**  to open the **Main Menu**.

Main Menu

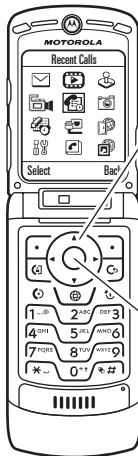

3 Press the Navigation Key **up, down, left, or right** () to highlight a menu feature.

4 Press the **Center Key**  to select it.

Note: All the illustrations, simulated screen and related images used in this manual are for reference only. There may be slight difference between the handset and keys and content of display used in this manual and those of your handset. Please refer to your handset for actuality.

Mobile Devices Business

(852)2506-3888 (Hong Kong)

www.motorola.com.hk (Hong Kong)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2006.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola

products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals from our Motorola web site, at <http://www.motorola.com.hk>.

Certain mobile phone features are dependent on the capabilities and settings of your service provider's

network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature is functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Manual Number:6887460Z27

contents

menu map	8	main attractions	24	handsfree speaker	50
Safety Information	10	Bluetooth™ wireless	24	codes & passwords	50
Use and Care	15	audio player	30	lock & unlock phone	51
EU Conformance	16	photos	32	customize	52
Recycling Information	17	videos	34	ring style	52
essentials	18	video calls	36	time & date	53
about this guide	18	text messages	36	wallpaper	54
SIM/USIM card	18	memory card	38	screen saver	54
battery	19	cable connections	40	themes	55
turn it on & off	21	phone updates	41	display appearance	55
make a call	22	basics	42	answer options	56
answer a call	22	display	42	calls	57
store a phone number	22	text entry	45	turn off a call alert	57
call a stored phone		volume	49	recent calls	57
number	22	navigation key	49	redial	58
your phone number	23	smart key	49	return a call	59
		external display	50	caller ID	59

emergency calls	59
voicemail	60
other features	61
advanced calling	61
phonebook	65
messages	70
personalising	74
call times & costs	76
handsfree	77
data calls	78
network	80
personal organizer	80
security	83
fun & games	83
MyMobileSoft.com	86
SAR Data	88
WHO Information	90

index	91
------------------------	-----------

Note: The functions available on this handset may vary in different regions and nations. Please contact your local customer service centres, agencies or retailers if you have any question about the handset functions. Motorola reserves all rights to revise and change this user's manual without obligation to notify any person of such revisions or changes

menu map

main menu



Messages

- Create Message
- Message Inbox
- Outbox
- Drafts
- Email *
- Voicemail *
- Browser Messages *
- Info Services *
- Templates



Multimedia

- Media Finder
 - Music
 - Pictures
 - Videos
 - Voice Notes
 - Ring Tones
 - Wallpapers
- Themes
- Camera
- Video Camera
- Voice Record



Games & Apps



Video Camera



Recent Calls

- (press the or to scroll through the call lists)



Camera



Tools

- SIM/ USIM Applications*
- Calculator
- Calendar
- Bluetooth Link
- Alarm Clock
- Dialling Services
 - Fixed Dial *
 - Service Dial *
 - Quick Dial *
- Voice Message
- World Clock*



Connection

- Bluetooth™ Link
- USB Settings
- MOTOSYNC™ *



WebAccess



Settings

- (see next page)



Phonebook



Web Shortcuts

* Indicates network or subscription-dependent features

This is the standard main menu layout. Your phone's menu may be a little different.

settings menu



Personalise

- Home Screen
- Main Menu
- Voice Dial setup
- Skin
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial *



Ring Styles

- Style
- style Detail



Connection

- Bluetooth™ Link
- USB Settings
- MOTOSYNC™ *



Call Divert *

- Voice Calls
- Video Calls
- Cancel All
- Divert Status
- Push to Call Fwd No.



In-Call Setup

- Date and Time
- In-Call Timer
- Call Cost Setup *
- My Caller ID
- Answer Options
- Call Waiting *
- MSG Alert



Initial Setup

- Time and Date
- Video Inter Gateway Setup*
- Speed Dial
- Auto Redial
- Display Timeout
- Backlight
- Charging Lights
- Scroll
- Text Marquee
- Language
- Battery save
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available *
- Active Line *
- Battery Meter
- Download Location
- Storage Devices
- Voice Dial Languages
- Software Update *
- Other Information *



Headset

- Auto Answer
- Ringer Options
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power - off Delay
- Charger Time



Aeroplane Mode

- Aeroplane Mode
- Prompt At Startup



Network

- New Network
- Network Setup
- Available Networks
- My Network List *
- Service Tone *
- Call Drop Tone *



Security

- Phone Lock
- External Key Lock
- Lock Application
- Fixed Dial *
- Restrict Calls *
- Call Barring *
- SIM PIN
- New Passwords
- Certificate Mgmt *



Java™ Settings

- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Backlight

* Indicates network or subscription-dependent features

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the “Smart Practices While Driving” section at the end of this guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks

on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.





 


Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.



Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the

lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



 
the ground

Don't drop your phone.

European Union Directives Conformance Statement

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

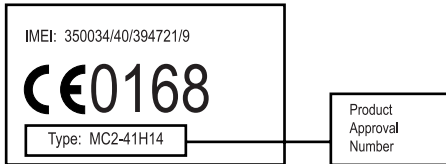

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Telephone and Accessories

Please do not dispose of mobile telephones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems have been set up to handle waste electrical and electronic items. Please contact your regional authorities for more details. If no suitable scheme exists, you may return unwanted mobile telephones and electrical accessories to any Motorola Approved Service Centre in your region.







essentials

about this guide

This guide shows how to open a menu feature as follows:

Find it:  >  **Messages** > **Create Message**

This means that, from the home screen:

- 1 Press the *center key*  to open the menu.
- 2 Press the *navigation key*  to scroll to  **Messages**, and press the *center key*  to select it.
- 3 Press the navigation key  to scroll to **Create Message**, and press the center key  to select it.

symbols



This means a feature is network, SIM/USIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

SIM/USIM card

 
Caution: Don't bend or scratch your SIM/USIM card. Keep it away from static electricity, water, and dirt.

Your *Subscriber Identity Module (SIM)* or *Universal Subscriber Identity Module (USIM)*

card contains personal information like your phone number and phonebook entries. It can also contain your voicemail, text message, and Internet access settings. If you put your SIM/USIM card in another phone, that phone uses your phone number.

To insert and use a **memory card**, see page 38.

Turn off your phone and remove your battery before you install or remove a SIM/USIM card.

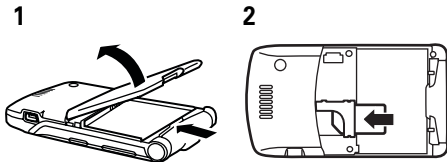

battery

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.



When storing your battery, keep it uncharged in a cool, dark, dry place.

- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



 
Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.


Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

battery installation


1

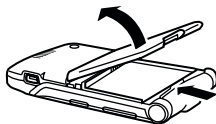


2

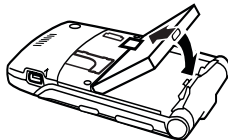 

3

 


4

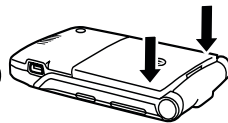 

battery charging

 New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. Your display shows **Charge Complete** when finished.

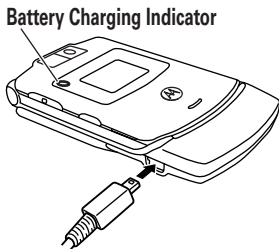

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.


The battery charger shipped with this device is designed for Motorola 3G mobile phones. Other chargers might take longer to charge

your battery, or cause your calls to fail during charging.


turn it on & off

Caution: Some phones ask for your SIM/USIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM/USIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.

To turn on your phone,


press and hold  for a few seconds or until the keypad or display lights up. If


prompted, enter your eight-digit SIM/USIM card PIN code and/or four-digit unlock code.

To turn off your phone, press and hold  for a few seconds.




make a call


Enter a phone number and press  to make a call.

To “hang up,” close the flip or press .

To make video calls, see page 36.

answer a call

When your phone rings and/or vibrates, just open the flip or press  to answer.

To “hang up,” close the flip or press .


store a phone number

You can store a phone number in your **Phonebook**:

- 1 Enter a phone number in the home screen.

- 2 Press the **Store** key.

Select **Create New Contact**, if necessary.



- 3 Enter a name and other details for the phone number. To select a highlighted item, press the *center key* .

- 4 Press the **Done** key to store the number.

To edit or delete a **Phonebook** entry, see page 66.


To store an email address from the home screen, press  >  **Phonebook**, then press **Options** > **Create New** > **Phone Contact**. Enter the new contact's name and **Email** information.

call a stored phone number


Find it:  >  **Phonebook**

- 1 Scroll to the phonebook entry.



Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want.

2 Press  to call the entry.



Note: Your phonebook can show you the entries stored in your phone's memory or on your SIM/USIM card. To choose which entries you see, press  >  **Phonebook**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**.

Note: Contacts on the SIM/USIM card only have a Name and Number. To choose where you store contacts, go back to the home screen and press  >  **Phonebook**, then press **Options** > **Setup** > **Store Contacts to** > **Phone** or **SIM Card**.

your phone number

From the home screen, press *the clear key*  then  to see your number.

Tip: Want to see your phone number while you're on a call? Press **Options** > **My Tel. Numbers**.

You can edit the name and phone number stored on your SIM/USIM card. From the home screen, press  , select an entry, press the **View** key, press the **Options** key, and select **Edit**. If you don't know your phone number, contact your service provider.



main attractions

You can do much more with your phone than make and receive calls!

Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

You can also use Bluetooth™ A2DP stereo headphones to listen to music files you store on your phone.

Note: The use of wireless phones while driving may cause distraction. Discontinue a

call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.


use a headset or handsfree car kit


Before you try to connect your phone with a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device).

Find it:  >  **Settings** > **Connection**
> **Bluetooth Link** > **[Add Audio Device]**



Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list and press the *center key* .
- 2 Press the **Select** or **Ok** key to connect to the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press the **Ok** key.

When your phone is connected, the Bluetooth indicator  shows in the home screen.

You cannot play some copyrighted files over a Bluetooth connection.

Shortcut: When Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just

turn on the device or move it near the phone. During a call or while playing a sound file, you can press **Options** > **Use Bluetooth** or **Listen via Bluetooth** to connect to a headset or handsfree device you have used before.

Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

copy files to another device

You can copy a media file, phonebook entry, datebook event, or Web shortcut from your phone to a computer or other device.




Note: You can't copy some copyrighted objects.

- 1 On your phone, scroll to the object that you want to copy to the other device.


- 2 Press **Options**, then select:
 - **Manage > Copy** for media files.
 - **Share** for phonebook entries.
 - **Share > Contact** for datebook events.
- 3 Select a recognized device name, or **[Look For Devices]** to search for the device where you want to copy the file.

If your phone could not copy the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection.



To change a device's **Access** setting, see page 29.

receive files from another device

If you do not see the Bluetooth indicator  at the top of your phone display, turn on your phone's Bluetooth feature by pressing  >  **Settings** > **Connection > Bluetooth Link > Setup > Power > On.**




- 1 Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognize each other, place your phone in discoverable mode so the sending device can locate it. Press  >  **Settings** > **Connection > Bluetooth Link > [Find Me].**

- 2 Press the **Accept** key on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete. If necessary, press the **Store** key to save the file.

send files to a printer

You can use a Bluetooth connection to send a picture, message, phonebook entry, or datebook view from your phone to a printer. 

Note: You cannot print message **Templates** or a phonebook **Message List**.

- 1 On your phone, scroll to the object that you want to print, then press **Options > Print > Bluetooth**. In the datebook, you can print the month, week, or day.





Tip: If you see it, you can print it. After you capture a picture in the camera, you can press the **Options** key and select **Print**.



- 2 If available, choose additional objects or print options.
- 3 Select a recognized printer name listed in the **Print Options** or **[Print] > [Look For Devices]** to search for the printer where you want to print the object.



Note: If you see **Service Not Supported** when you try to print, select **Options > Manage > Copy > [Look For Devices]** instead. Always use this option to print 4x6 photos.






advanced Bluetooth features

A device is *recognized* after you connect to it once (see page 24).

features	
make phone visible to other device	Allow a Bluetooth device to discover your phone:  >  Settings > Connection > Bluetooth Link > [Find Me]
connect to recognized device	Connect your phone to a recognized handsfree device:  >  Settings > Connection > Bluetooth Link > Audio Devices > <i>device name</i>

features	
drop connection with headset or handsfree device	 >  Settings > Connection > Bluetooth Link > Audio Devices Scroll to the device name and press the Drop key.
switch to headset or handsfree device during call	During a call, press Options > Use Bluetooth to switch to a recognized headset or car kit. Your phone connects automatically, or shows a list of devices you can select.

features	
play sound files on a recognized headset	<p>While playing a sound file, press </p> <p>Options > Listen via Bluetooth to switch to a recognized headset.</p> <p>Your phone connects automatically, or shows a list of devices you can select.</p> <p>You cannot play some copyrighted files over a Bluetooth connection.</p>
move multimedia object to device	<p>Caution: Moving an object deletes the original object from your phone.</p> <p>Scroll to the object, press </p> <p>Options > Manage > Move, select the device name.</p>

features	
copy multimedia object to device	<p>Scroll to the object, press </p> <p>Options > Manage > Copy, select the device name.</p>
edit device properties	<p> >  Settings </p> <p>> Connection</p> <p>> Bluetooth Link > Found Devices</p> <p>Scroll to the device name and press the <i>center key</i> .</p> <p>Note: The Access Settings can restrict how this device connects to your phone. You can choose Automatic (always connects), Always Ask (asks you before connecting), Just Once or Never.</p>

features	
set	> Settings
Bluetooth	> Connection
options	> Bluetooth Link > Setup

audio player

Your phone can play and store AU, WMA, and MP3 song files. You can use a removable memory card with your phone to store more songs (see page 38).



Find it: > Multimedia > Media Finder > Music

Press up or down to scroll to an option, and press the *center key* to select it:

options	
All Songs	Show and play individual songs. Note: All of your phone's songs appear in this list. Some songs do not have any Artist , Album , or Genre information, so they don't appear in those lists.
Recently Played	Show songs you played recently.
Playlists	Create or play a playlist (see page 31).
Artists	Select an artist to show or play their songs.
Albums	Select an album to show or play its songs.

options	
Genres	Select a type of music to show or play songs.
Composers	Select a composer to show or play songs.

When you select a song:

- **Play or pause** the song by pressing the *center key* .
- **Change volume** by pressing the volume keys.
- **Hide the player** by pressing **Options** > **Hide**. This lets you use other phone features while the song plays. To stop the hidden audio player, press  in the home screen.

Tip: You can listen to tunes on your way. You can use Bluetooth™ A2DP stereo headphones (page 24), and use

aeroplane mode to make your phone safe to use even while you're on a plane (page 85).

Your phone also has a **Ring Tones** player. To use it, press  >  **Multimedia** > **Media Finder** > **Ring Tones**.


load music files

To download songs from the Internet, see page 84. To copy files between your phone and a computer, see page 40.

Note: Your phone may not play MP3 files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

create a playlist

Find it:  >  **Multimedia** > **Media Finder** > **Music** > **Playlists** > **[Create New Playlist]**

Open a song list, and press the *center key*  to select each song you want. After you press the **Done** key, enter a name for your list.

To hear your playlist, highlight it under **Playlists** and press **Options > Play**.

play music with your phone closed

You can close your phone while you listen to music. When your phone is closed, the external display shows the song artist, title, and time. While a song is playing:

 
- **Press the volume keys** to adjust playback volume.
- **Press the smart key** to pause a song.

photos


To view, edit, or delete photos you've taken, see page 83.

Your camera lens is on the back of your phone when the phone is open.

- 1 Press  >  **Multimedia** > **Camera** to see the camera viewfinder.

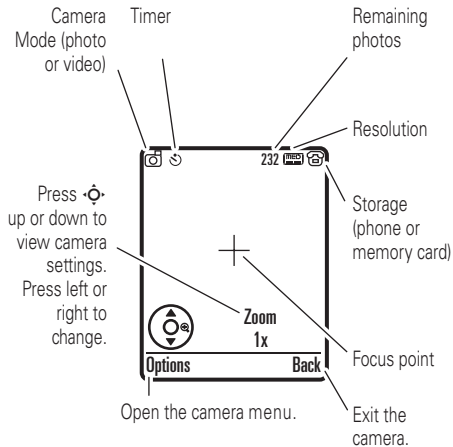

Note: The number of photos remaining is only an estimate.


- 2 Press the *center* key  to take the photo in the viewfinder. You can:

- Press the **Options** key to store or discard the photo.


If you press **Options** > **Print**, you can print the picture over a Bluetooth™ connection (see page 27).

- Press the **Send** key to send the photo in a message.

Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.

- Press  to discard the photo and return to the active viewfinder.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
Go To Pictures	See stored pictures and photos.
Go To Video Mode	Switch to the video camera.
Internal / External View	Switch to the camera facing you (Internal) or facing away from you (External).
Auto-Timed Capture	Set a timer for the camera to take a photo.
Camera Setup	Open the setup menu to adjust photo settings.
Switch Storage Device	Choose to store videos on your phone or a memory card. 

options

Free Space

See how much memory remains.

Note: Your service provider may store some content in user memory before you receive the phone.

self portrait

 
If you close your phone while the viewfinder is active, the external display shows the image. Press the volume keys to zoom, or press the smart key to capture and store the image.

videos

To view, edit, or delete videos you've recorded, see page 84.


Your camera lens is on the back of your phone, when your phone is open.

Press  >  **Multimedia** > **Video Camera** to see the video viewfinder.

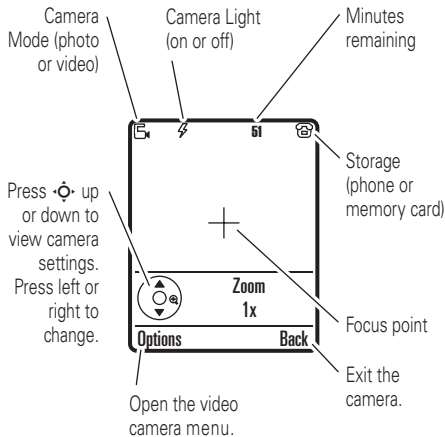



Note: The number of minutes remaining is an estimate.

Tip: If you want to send your video in a message, the video length must be set to **MMS**. To set length, press **Options** > **Video Camera Setup** > **Video Length**.


- 1 Press the *center key*  to start recording the video in the viewfinder.
- 2 Press the **Stop** key to stop recording the video. You can:

- Press the **Options** key to preview, store, or discard the video.

To play a stored video from the home screen, press  >  **Multimedia** > **Media Finder** > **Videos** > **All Videos** > *video name*.

- Press the **Send** key to send the video in a message.



Enter text and press **Send To**, then scroll to a recipient address and press the *center key*  to select it. Press the

Options key to enter a new number. To send the message, press the **Send** key.

Note: Some other phones or networks do not support messages with videos.


video calls

If you call someone who has a 3G video phone, you can see each other while you talk. If your phone is roaming on a **non-3G network**, video calls will not work (see the Roam indicator on page 43).



Note: Your phone's external **video call indicator** blinks during a video call, to let people around you know that they might be in your video.


make a video call

1 Enter a phone number and press  to see the video call preview.

2 Press  to make the call.

During the call:

- Press the **Stop Video** key to change the call to a voice call with the speakerphone on.
- If you accept another **incoming voice call**, your phone changes this video call to a voice call.
- If you accept another **incoming video call**, your phone ends this video call.

3 To end the call, press .

text messages

To create a group mailing list, see page 68. For more message features, see page 70.

send a text message

A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and you can put text and media objects on each page. You can send a message to other compatible phones or to email addresses.



Find it:  >  **Messages** > **Create Message**

- 1 Press keypad keys to enter text on the page (for details about text entry, see page 45).


To insert a **picture, sound, or other object** on the page, press **Options** > **Insert**. Select the file type and the file.

To insert **another page** in the message, enter text or objects on the current page and press **Options** > **Insert** > **New Page**. You can

enter more text and objects on the new page.

- 2 To **send** the message, press the **Send To** key.

receive a text message

When you receive a message, your phone plays an alert, and the display shows **New Message** with a message indicator, such as .



Press the **Read** key to open the message.

If a multimedia message contains media objects:

- Photos, pictures, and animations show as you read the message.
- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.

- Attached files are added to the end of the message. To open an attachment, scroll to the file indicator/filename and press the **View** key (image), **Play** key (sound), or **Open** key (phonebook vCard, datebook vCalendar entry, or unknown file type).

manage text messages

You can sort and move your messages.



Find it:  >  **Messages** > **Message Inbox**

Scroll to a message and press the **Options** key. Your options include:

options	
Sort by	Sort messages by Time , Sender , Msg Type , Attachments , Priority and Unread Msgs , or other details. Note: You can also sort the messages in your Email and Outbox lists.

memory card

 
You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).



Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

install a memory card

- 1 Remove the battery door.
- 2 Push the card into the metal holder until it clicks into place.

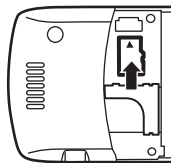

To remove the memory card, push it in until it clicks

again. It begins to slide out, and you can slide it the rest of the way out.

- 3 Replace the battery door.

see and change memory card information

To **see the files** stored on your memory card and on your phone, open a file list, such as **Pictures** (see page 83). Icons can indicate if a file is stored in your phone memory (📁) or on your memory card (📁). To copy or move a file from your phone to your memory card, highlight it in the list and press **Options > Manage > Copy** or **Move > Memory Card**. You cannot copy or move some copyrighted files.

To **copy files** between your memory card and a computer, you can use a cable connection (see page 40) or a Bluetooth connection (see page 25).

To see your **memory card name, available memory**, and other information about the card:

Find it: ⬅️ > ⚙️ **Settings > Phone Status > Storage Devices**

 
- 1 Press ⬅️ to scroll to the memory card that is installed.
- 2 Press the *center key* ⬅️ to see the memory card information. Your phone stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

or

Press **Options** to see the **Storage Device** menu, which lets you **Format** or **Rename** the memory card.

cable connections

 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

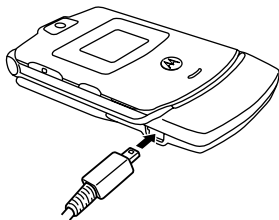

Note: Motorola Original USB data cables and supporting software may be sold separately. Check your computer or hand-held device to determine the type of cable you need. To make **data calls** through a connected computer, see page 78.





connect your memory card to a computer

You can use a cable connection to access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Disconnect the cable from your phone, if it is connected, then press  >  **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Memory Card**.

This directs the USB connection to your memory card.

Connect the cable to your phone and to an available USB port on your computer. Then follow these steps:

On your computer:

- 1 Open your “My Computer” window, where your phone’s memory card shows as a “Removable Disk” icon.
- 2 Click on the “Removable Disk” icon to access the files on your phone’s memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows:
audio files: > mobile > audio
screen savers: > mobile > picture
wallpapers: > mobile > picture
video clips: > mobile > video
- 4 When you finish, disconnect your phone by selecting the “Safely Remove Hardware” icon in the system tray at the bottom of your computer screen. Then disconnect the “USB Mass Storage Device.”

- 5 Disconnect the cable from your phone and computer.

On your phone:

To return to **Data** as your USB default connection, press  >  **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Data Connection**.

phone updates

Sometimes we think of ways to make your phone’s software faster or more efficient after you’ve purchased your phone. You can find out if your phone can be updated and register for free update notifications at: <http://www.hellomoto.com/support/update>



 
Note: Software updates do not affect your phonebook entries or other personal entries. If you receive a software update but choose to install it later, see page 80.

basics


See page 1 for a basic phone diagram.


display


The *home screen* shows when you turn on the phone.

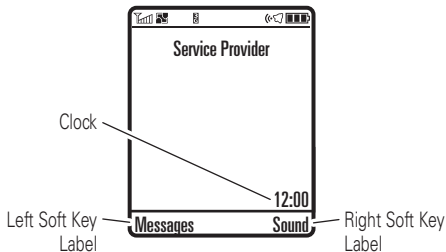

Note: Your home screen might look different from the one shown, depending on your service provider.

To dial a number from the home screen, press number keys and .

 
Press  up, down, left, or right in the home screen to open basic menu features.

Press the *center key*  to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

You may not be able to change the left soft key and right soft keys.

Please contact your service provider for more details. After activating SCREEN3™, you may not be able to use *sto* to open the **Menu**. Please use the right soft key to open it.

Status indicators can show at the top of the home screen:

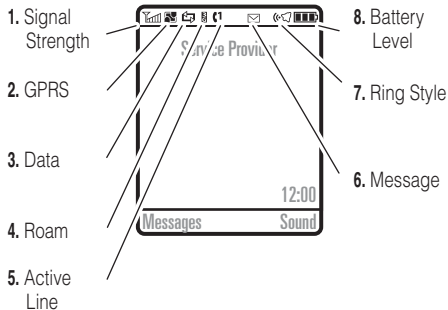

- 1 **Signal Strength Indicator** – Vertical bars show the strength of the network connection. You can't make or receive calls when or shows.
- 2 **GPRS Indicator** – Shows when your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. Indicators show PDP

context active or packet data available .

- 3 **Data Indicator** – Shows connection status.

secure packet data transfer

unsecure packet data transfer

secure application connection

unsecure application connection

secure *Circuit Switch Data* (CSD) call

unsecure CSD call

High-Speed Downlink Packet Access (HSDPA) data transfer



Bluetooth™ connection is active





- 4 **Roam Indicator** – Shows when your phone is seeking or using a


network outside your home network. Indicators can include:


- | | |
|--|--|
|  2G home |  2G roam |
|  2.5G home |  2.5G roam |
|  3G home |  3G roam |
|  HSDPA home |  HSDPA roam |

HSDPA is *High-Speed Downlink Packet Access*, available on some networks.

- 5 Active Line Indicator** – Shows  to indicate an active call, or  to indicate when call divert is on. Indicators for dual-line-enabled SIM/USIM cards can include:

- | | |
|---|---|
|  line 1 active |  line 1 active, call divert on |
|  line 2 active |  line 2 active, call divert on |

When an alarm is activated,  can show here.

- 6 Message Indicator** – Shows when you receive a new message.  Indicators can include:

-  text message  voice message


- 7 Ring Style Indicator** – Shows the ring style setting.

- | | |
|---|---|
|  loud ring |  vibrate & ring |
|  soft ring |  vibrate then ring |
|  vibrate |  silent |

- 8 Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

text entry

 Some features let you enter text.

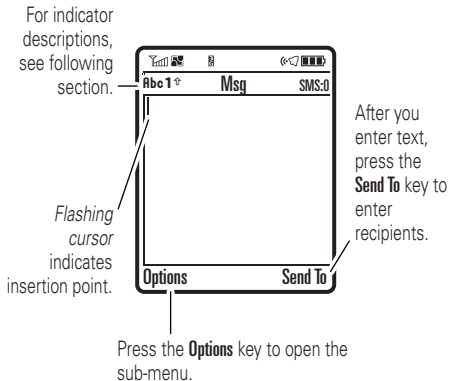

Press **[#]** in a text entry view to select an entry mode:

entry modes	
1 or 1	Your Primary text entry mode can be set to any iTAP™ 1 or tap 1 mode.
2 or 2	Your Secondary text entry mode can be set to any iTAP 2 or tap 2 mode, or set to None if you don't want a secondary entry mode.
123	Numeric mode enters numbers only.
@%	Symbol mode enters symbols only.

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**.

iTAP™ and Tap mode tips

 
- Press **[0]** in a text entry view to change text case to all capital letters (**ABC**), no capitals (**abc**), or next letter capital (**Abc**).
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP or Tap mode.
- Press **[⦿]** to move the flashing cursor to enter or edit message text.
- Press **[C]** to delete the character to the left of the cursor. Hold **[C]** to delete the word.
- To cancel your message, press **[⏏]** > **Abort Message**.

iTAP™ mode

Press **[#]** in a text entry view to switch to iTAP mode. If you don't see **[1]** or **[2]**, press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, if you press **[7] [7] [6] [4]**, your display shows:

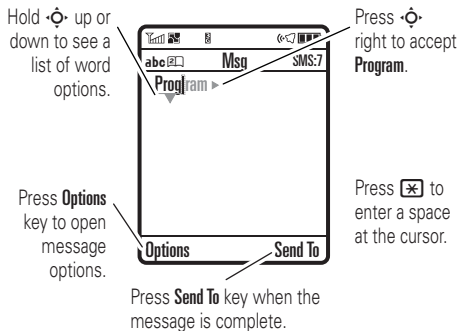

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.

 
Tip: Don't worry if you forget how iTAP works. In a text entry display, you can press **Options > Text Setup > Text Tutorial** to see an explanation.

tap mode

Press **#** in a text entry view to switch to tap mode. If you don't see **Abc1** or **Abc2**, press **Options > Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **TAP** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, if you press **[7]** one time, your display shows:

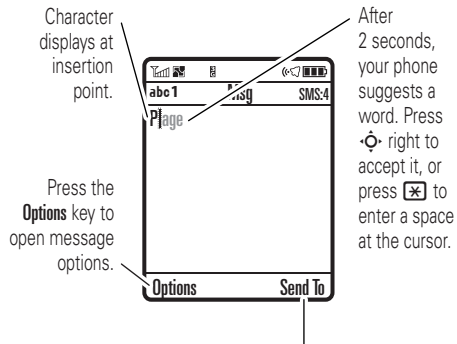

After you enter text, press the **Send To** key to enter recipients.

The first character of every sentence is capitalized. If necessary, press **⬇** down to change the character to lowercase before the cursor moves to the next position.

numeric mode

Press **[#]** in a text entry view until you see **123**. Press the number keys to enter the numbers you want.

Shortcut: You can press and hold a number key to temporarily switch to numeric mode from iTAP™ or Tap modes. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.

 
symbol mode

Press **[#]** in a text entry view until your phone shows a list of symbols. Scroll to the symbol you want, then press the *center key* **⬆**.

volume

Press the volume keys to:


- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen

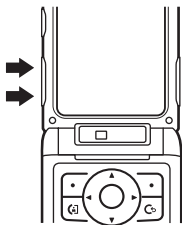


Tip: Sometimes silence really is golden. That's why you can quickly set your ringer **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Vibrate** or back by holding **#** in the home screen.

To change your ringer volume when your phone is closed, see page 49.



navigation key

Press the *navigation key*  up, down, left, or right to scroll to items in the display.



When you scroll to an item, press the *center key*  to select it.

smart key

The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the *center key* ). The smart key usually does the same thing as pressing the *center key* . To find the smart key, see page 1. To change what the smart key does in the home screen, see page 75.

external display

When you close your phone, the external display shows the date, status indicators, and notifications for incoming calls and other events. For a list of phone status indicators, see page 43.

set phone ring style in external display

- 1 Press a volume key to see **Ring Styles**.
- 2 Press the smart key repeatedly, until the style you want appears.
- 3 Press a volume key to return to the home screen.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **Options** key and select **Speakerphone On** to turn the handsfree speaker on. Your display shows **Speakerphone On** until you turn it off or end the call.


Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it:  >  Settings > Security
> New Passwords

You can also change your **SIM/USIM PIN** or call barring passwords.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM/USIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:
Press  >  Settings > Security > Phone Lock
> Lock Now.

To **automatically lock** your phone whenever you turn it off: Press  >  Settings > Security
> Phone Lock > Automatic Lock > On.

Note: You can make emergency calls on a locked phone (see page 59). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer.**

customize

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:



The ring style profile's indicator shows at the top of your home screen. To choose your profile:

Find it: > **Settings** > **Ring Styles**
> **Style:** *style name*

Find it: > **Settings** > **Ring Styles**

Shortcut: In the **home screen**, press the volume keys up or down to quickly change your ring style profile. With your **phone closed**, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change.


Tip: Do you get a lot of text messages? If you don't want to hear incoming message alerts during phone calls, press > **Settings** > **In-Call Setup** > **MSG Alert** > **Not in Call**.

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.



> *style Detail*

Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Scroll to the alert you want, then press the *center key* .
- 3 Press the **Back** key to save the alert setting.



time & date



Your phone can automatically update your time zone, time, and date. It uses the time and date for the datebook.



To **synchronize** the time zone, time, and date with the network*: Press  >  **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **Time & Time Zone**. If you don't want



your phone to automatically update your time zone and date, choose **Time Only** instead.

To **manually** set the time zone, time, and date, turn off **Autoupdate**, then: Press  >  **Settings** > **Initial Setup** > **Time and Date** > **Time Zone**, *time* or *date*. To jump to a city in the time zone list, enter the first letter of its name by pressing keypad keys.*

Tip: To choose three time zones for easier access, press  >  **Tools** > **World Clock**. When you open **World Clock**, you can press the **Options** key to see the **Map View** of time zones.*

To choose an **analogue or digital** clock for your home screen, press  >  **Settings** > **Personalise** > **Home Screen** > **Clock**.


* Indicates network or subscription-dependent features

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Note: Your *theme* can also set your wallpaper (page 55).

Find it:  >  **Settings** > **Personalise** > **Wallpaper**

options	
Picture	Press  up or down to select a picture, or select None for no wallpaper.
Layout	Select Centre to center the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.


screen saver

Set a photo, picture, or animation as a screen saver. The screen saver shows when the flip is open and no activity is detected for a specified time.

Note: Your *theme* can also set your screen saver (page 55).

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.



Find it:  >  **Settings** > **Personalise**
> **Screen Saver**

options	
Picture	Press  up or down to select a picture or animation, or select None for no screen saver.
Delay	Select the length of inactivity before the screen saver shows.

themes



A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more.



To **apply** a theme, press  >  **Multimedia** > **Themes** > *theme*.



To **download** a theme, see page 84.

To **delete themes you downloaded**, press  >  **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Delete**.

To **preview** a theme, press  >  **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Preview**.

display appearance

Note: The **Battery Save** feature tells your phone not to light the display or keypad unless you're in a dark place. To turn on this feature, press  >  **Settings** > **Initial Setup** > **Battery save** > **On**.

To choose a phone **skin** that sets the look and feel of your phone's display: Press  >  **Settings** > **Personalise** > **Skin**. Your *theme* can also set your phone skin (page 55).

To set your display **brightness**: Press  >  **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press  >  **Settings** > **Initial Setup** > **Backlight**.

Note: To turn the backlight on or off for Java™ applications, press  >  **Settings** > **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press  >  **Settings** > **Initial Setup** > **Display Timeout**.

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find it:  >  **Settings** > **In-Call Setup** > **Answer Options**

options	
Multi-key	Answer by pressing any key.
Open To Answer	Answer by opening the flip.

calls


To make and answer calls, see page 22.

turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.



recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see a list of dialled calls.



Find it:  >  **Recent Calls**, press  or  to select > **Received Calls** or **Dialled Calls**

Scroll to a call. A ✓ next to a call means the call connected.

- To call the number, press .
- To see call details (like time and date), press the *center key* .
- To see the **Last Calls Menu**, press **Options**. This menu can include:



options	
Store	Create a phonebook entry with the number in the Number field. Store does not appear if the number is already stored.



options	
Video Call	Make a video call to the number.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID / Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message.
Send Voice Msg	Record and send a voice message to the number.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Filter by	Select dialled or received calls.
Notepad	Open the number in a text editor.

options	
Call Times*	Open your call time information. 
Call Cost*	Open your call cost information. 

* Indicates network or subscription-dependent features

redial


- 1 Press  from the home screen to see a list of recent calls.
- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal**, and you see **Call Failed**, you can press  or the **Retry**  key to redial the number. When the call goes through, your phone rings or vibrates one

time, shows **Redial Successful**, and connects the call.

return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Call(s)**, where **X** is the number of missed calls.

- 1 Press the **View** key to see the received calls list.
- 2 Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your external and internal displays.



Your phone shows the caller's name and picture when they're stored in your phonebook, or **Anonymous Call** when caller ID information isn't available.

You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 67).


To show or hide **your phone number** from the next person you call, enter the phone number and press **Options > Hide ID/Show ID**.

emergency calls

Your service provider programs one or more emergency phone numbers, such as 999 or 112, that you can call under any circumstances, even when your phone is locked or the SIM/USIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency

number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message

indicator  and **New Message**. Press the **Read** key to read the message.

To **check** voicemail messages:

Find it:  >  **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.

other features

advanced calling

features

voice dial a number not stored in the phonebook (digit dial)

Press and hold .

When prompted, say “**digit dial**” (within two seconds). When prompted again, say the digits you want to dial (within two seconds per digit).

Your phone recognizes the digits you want. To voice dial a phonebook entry, see page 65.

features

adapt your voice dial

You can improve voice dial operations by training the phone to recognize your voice.

 >  **Settings** > **Personalise** > **Voice Dial setup**
> **Adapt digits**

attach a phone number




Dial an area code or prefix for a phonebook number, then press **Options**
> **Attach Number**.

features


notepad

Press  >  **Recent Calls**, press the **Options** key, then **Notepad**.

- To call the number, press .
- To create a phonebook entry with the number in the Number field, press the **Store** key.
- To open the **Dialling Menu** to attach a number or insert a special character, press **Options**.

international calls



If your phone service includes international dialing, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

features

hold a call*

Press **Options** > **Hold** to put all active calls on hold.

mute a call

Press the **Mute** key (if available) or **Options** > **Mute** to put all active calls on mute.

features



call waiting*



When you're on a call, you'll hear an alert if you receive a second call.

Press  to answer the new call.

- To switch between calls, press the **Options > Switch** key.
- To connect the two calls, press the **Link** key.
- To end the call on hold, press **Options > End Call on Hold**.


To turn the call waiting feature on or off, press  >  **Settings > In-Call Setup > Call Waiting > On** or **Off**.

features

conference call*




During a call:

Dial next number, press , press the **Link** key.

transfer a call*



During a call:

Options > Transfer, dial transfer number, press .

automatic call diverting*



Set up or cancel automatic call diverting:

 >  **Settings > Call Divert**

Choose **Voice Calls** or **Video Calls** to set up diverting, or **Cancel All** to cancel diverting.

features

manual call diverting*



You can set your phone to divert an incoming call only when you press a key.

To set the number where your phone diverts the calls:

• > **Settings** > **Call Divert**
> **Push to Call Fwd No.**, and enter the phone number

restrict calls*



Restrict outgoing or incoming calls:

• > **Settings** > **Security** > **Restrict Calls**

call barring*



Restrict your voice or video calls to block all calls, international calls, or all calls except ones on your home network.

• > **Settings** > **Security** > **Call Barring**

features

fixed dial*



When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

Turn fixed dialing on or off:

• > **Settings** > **Security** > **Fixed Dial**

Use the fixed dial list:

• > **Tools** > **Dialling Services** > **Fixed Dial**

service dial*



Your service provider might give you phone numbers for taxi companies or other services. These phone numbers are stored on your SIM/USIM card. To see them:

• > **Tools** > **Dialling Services** > **Service Dial**

features

quick dial*



Dial preprogrammed phone numbers:

> Tools > **Dialling Services** > **Quick Dial**

DTMF tones

Activate DTMF tones:

> Settings > **Initial Setup** > **DTMF**

To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press **Options** > **Send Tones**.

* Indicates network or subscription-dependent features

phonebook

features

voice dial a phonebook entry (name dial)

Voice dial a number stored in the phonebook:

Press and hold .

When prompted, say "**name dial**" (within two seconds). When prompted again, say the entry's name (within two seconds).

Your phone matches your voice to a phonebook entry name. To voice dial a number not stored in the phonebook, see page 61.

features

speed dial a phonebook entry

You can assign the keys **1** through **9** to phonebook entries. Then, when you press and hold a key, your phone calls the entry.

Note: Your service provider might have assigned some keys, such as **1** for your voicemail number. You can only speed dial phonebook entries that are stored on your phone (not on your SIM/USIM card).

To **assign a speed dial key**, press **••** > **☰ Phonebook** and scroll to the phonebook entry. Then, press **Options** > **Add to Speed Dial** and pick a speed dial key.

To **use a speed dial key**, just press and hold the key while in your home screen.

features

edit or delete a phonebook entry

Edit a number stored in the phonebook:

•• > **☰ Phonebook**, scroll to the phonebook entry, and press **Options**. You can select **Edit Contact**, **Delete Contact**, or other options.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press ***✕** and **#** to see the entries you use frequently or entries in other categories.

features

set ringer ID for a phonebook entry

Assign a ring alert (ringer ID) to an entry:

☰ > 📖 Phonebook > *entry*, then press
Options > **Edit Contact** > **Ringer ID** > *ringer name*

Note: The **Ringer ID** option isn't available for entries stored on the SIM/USIM card. To copy an entry from SIM/USIM to phone memory, see page 69.

Activate ringer IDs:

☰ > ⚙ Settings > **Ring Styles** > *style Detail*
> **Ringer IDs**

features

set picture ID for a phonebook entry

Assign a photo or picture to show when you receive a call from an entry:

☰ > 📖 Phonebook > *entry*, then press
Options > **Edit Contact** > **Picture** > *picture name*

Note: The **Picture** option isn't available for entries stored on the SIM/USIM card. To copy an entry from SIM/USIM to phone memory, see page 69

set picture ID view for phonebook

Show entries as a text list, or with picture caller ID photos:

☰ > 📖 Phonebook, then press **Options** > **Setup**
> **View by** > *view name*

features

set category for a phonebook entry

☰ > 📖 Phonebook > *entry*, then press
Options > Edit Contact > Category > *category name*

Note: The **Category** option isn't available for entries stored on the SIM/USIM card. To copy an entry from SIM/USIM to phone memory, see page 69

When you open your phonebook, press
✖ or # to see your categories.

set category view for phonebook

☰ > 📖 Phonebook, then press Options
> Filter by > Category > *category name*

You can show **All** entries, entries in a predefined category (**General**, **Friends**, **Family**, **Work**), or entries in a category you create.

Shortcut: When you open your phonebook, press ✖ or # to see your categories.

features

create group mailing list

You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:

☰ > 📖 Phonebook, then press
Options > Create New > Message List

You can select the list name as an address for multimedia messages.

Note: A **Message List** cannot include entries stored on the SIM/USIM card. To copy an entry from SIM/USIM to phone memory, see page 69

features

sort phonebook list

Set the order in which entries are listed:



 >  **Phonebook**, then press

Options > **Setup** > **Sort by** > *sort order*

You can sort the phonebook list by **First Name** or **Last Name**.

copy one phonebook entry



Copy an entry from the phone to the SIM/USIM card, or from the SIM/USIM card to the phone:

 >  **Phonebook**, scroll to the entry, press **Options** > **Copy to SIM Card** or **Copy to Phone**

features



copy multiple phonebook entries

Copy multiple phonebook entries between the phone and SIM/USIM card:

 >  **Phonebook**, scroll to one entry, press **Options** > **Select Multiple to**, then select **Copy to SIM Card** or **Copy to Phone**

send phonebook entry to another device

Send a phonebook entry to another phone, computer, or device:

 >  **Phonebook**, scroll to the entry, press **Options** > **Share**

For more information about copying files to another device, see page 25.

features

print phonebook entry over Bluetooth™ connection

You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer.

 >  **Phonebook**

Scroll to the entry you want to print, and press **Options** > **Select Multiple to** > **Print**.

You cannot print a **Message List**. For more about Bluetooth connections, see page 24.

messages

For basic text message features, see page 36.

Your phone reads message settings from the SIM/ USIM card. If you put another SIM/ USIM card in your phone, your phone sends and receives messages for the phone number on the new card.

features

send email

 >  **Messages** > **Email**

To use email, you might need to enter a **User ID** and **Password** in your email settings (see page 73).

features

send voice message



•◉ > ✉ Messages > Create Message > New
Voice Msg

To record the voice message, press the **Record** key, speak, then press the **Stop** key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.

features

read and manage messages



•◉ > ✉ Messages > Message Inbox

Icons next to each message indicate if it is read or unread . Icons can also indicate if the message is locked , urgent or if it has an attachment .

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.


To open a message, press •◉. Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

features

read and manage email

 >  **Messages** > **Email**

To **Reply**, **Forward**, **Lock**, or **Delete** a message, scroll to it and press **Options**.

To open a message, press . Then, you can press **Options** to use or store any phone numbers, email addresses, Web sites, or files in the message.

store message objects

Go to a multimedia message page, or scroll to an object in a message, then:

Options > **Store**

features

print message over Bluetooth™ connection

You can use a Bluetooth wireless connection to send a message from your phone to a printer.

 >  **Messages** > **Message Inbox**, **Email**, **Outbox**, or **Drafts**

Scroll to the message you want to print and press **Options** > **Print**.

You cannot print message **Templates**. For more about Bluetooth connections, see page 24.

features

store text messages on your SIM/USIM card



To store incoming text messages on your SIM/USIM card, press:

•◉ > ✉ Messages, then press **Options > Setup > Message Setup > Text Message Setup > Default Storage > SIM Card.**

features

edit email settings



You can edit the settings for your Email connections. To use email, you need to store your email **User ID** and **Password**.

•◉ > ✉ Messages > Email

If you have more than one email account, select an account to edit.

Your phone shows a list of email settings. Here is where you store your email **User ID** and **Password**.

Note: To create a new account, select **New Entry** in the **Account Settings** list. Your display shows a folder for each email account under

•◉ > ✉ Messages > Email

features

browser messages *



Read messages received by your micro-browser:

 >  **Messages** > **Browser Messages**

info services *



Read subscription-based information services messages:

 >  **Messages** > **Info Services**

* Indicates network or subscription-dependent features

personalising

features



language

Set menu language:

 >  **Settings** > **Initial Setup** > **Language**

scroll

Set the scroll bar to **Up/Down** or **Wrap Around** in menu lists:

 >  **Settings** > **Initial Setup** > **Scroll**

activate ringer IDs

Activate ringer IDs assigned to phonebook entries and categories:

 >  **Settings** > **Ring Styles** > *style Detail*
> **Ringer IDs**

features

ring volume

•📶 > ⚙️ Settings > Ring Styles > *style* Detail
> Ring Volume

keypad volume

•📶 > ⚙️ Settings > Ring Styles > *style* Detail
> Key Volume

reminders

Set reminder alerts for messages that you receive:

•📶 > ⚙️ Settings > Ring Styles > *style* Detail
> Reminders

menu view

Show the main menu as graphic icons or as a text-based list:

•📶 > ⚙️ Settings > Personalise > Main Menu > View

features

main menu

Reorder your phone's main menu:

•📶 > ⚙️ Settings > Personalise > Main Menu
> Reorder

show/hide menu icons



Show or hide menu feature icons in the home screen:

•📶 > ⚙️ Settings > Personalise > Home Screen
> Home Keys > Icons

change home keys



Change features for the soft keys, navigation key, and smart key in the home screen:

•📶 > ⚙️ Settings > Personalise > Home Screen
> Home Keys

features

master reset

Reset all options **except** unlock code, security code, and lifetime timer:


 >  Settings > Initial Setup > Master Reset

master clear

Caution: Master clear **erases all information you have entered** (including phonebook and datebook entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

 >  Settings > Initial Setup > Master Clear

call times & costs *

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.



The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times



Show call timers:

 >  Recent Calls, press the **Options** key, then > **Call Times**

features

in-call timer



Show time or cost information during voice call:

> **Settings** > **In-Call Setup** > **In-Call Timer**

call cost



Show call cost trackers:

> **Recent Calls**, press the **Options** key, then > **Call Cost**

* Indicates network or subscription-dependent features

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.




features

speakerphone





Activate the speakerphone during a call:

Press the **Speaker** key (if available, or **Options** > **Speakerphone On**).

features	
<p>auto answer (car kit or headset)</p> <p>Automatically answer calls when connected to a car kit or headset:</p> <p>📶 > ⚙️ Settings > Car Settings or Headset > Auto Answer</p>	
<p>voice dial (headset)</p> <p>Enable voice dial with headset send/end key:</p> <p>📶 > ⚙️ Settings > Headset > Voice Dial</p>	
<p>auto handsfree (car kit)</p> <p>Automatically route calls to a car kit when connected:</p> <p>📶 > ⚙️ Settings > Car Settings > Auto Handsfree</p>	

data calls *

To connect your phone with a USB cable, see page 40.



features	
<p>send data</p> <p>Connect your phone to the device, then place the call through the device application.</p>	
<p>receive data</p> <p>Connect your phone to the device, then answer the call through the device application.</p>	

features

setting up Exchange ActiveSync

You can use the Internet to synchronize your phone's phonebook and datebook entries with an email account on a Microsoft® Exchange 2003 Server.



You need to know the email account's **user name** and **password**, the Microsoft® Exchange **server name**, and the **user domain name**. Confirm that the **Mobility** option is enabled on the email account, and that **data service** is activated with your phone service provider.

To **set up** an ActiveSync partner, press  >  **Settings** > **Connection** > **MOTOSYNC** > **Exchange**, press the **Options** key, then **Setup**. Enter the server details, including **Server Name**, **Domain**, and the **Web Session** to use. To set up a **Web Session**, see page 84.

features







using Exchange ActiveSync

Once you set up an Exchange ActiveSync partner, you can schedule your phone to synchronize with the account automatically.

To **schedule** synchronization, press  >  **Settings** > **Connection** > **MOTOSYNC** > **Exchange**, press the **Options** key, then > **Auto Sync Setup**. Enter the time and days you want your phone to synchronize.







* Indicates network or subscription-dependent features

network

features	
network settings	
See network information and adjust network settings:	
 >  Settings > Network	
software update*	
Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to download it and install it later. To install a software update you downloaded:	
 >  Settings > Phone Status > Software Update > Install Now	

* Indicates network or subscription-dependent features

personal organizer

features	
set alarm	
 >  Tools > Alarm Clock	
turn off alarm	
When an alarm happens: To turn off the alarm, press the Disable key or  . To set an eight-minute delay, press the Snooze key.	
Note: The Snooze key is available only if the phone is already powered on when the alarm sounds.	
add new datebook event or task	
Your datebook can store events (with a start and end time that can repeat) or tasks (with a due date).	
 >  Tools > Calendar , scroll to the day, press  , press Options > Create New Event or Create New Task	

features

see datebook event or task

See or edit event or task details:

⬅️ > 🗓️ **Tools** > **Calendar**, scroll to the day, press ⬅️

Tip: Keeping up with life can be tough work. To see a list of your upcoming events or tasks, open the datebook and press **Options** > **View** > **Organised Events** or **Organised Tasks**.

change datebook settings

⬅️ > 🗓️ **Tools** > **Calendar**, then press **Options** > **Setup**

You can choose the **Default View** that appears when you open your datebook, and you can show or hide the **Tasks On Day View**. You can tell your phone to **Power On** if it is turned off when a datebook alert occurs. Turn on **Lunar Calendar** if you do not want to use a solar calendar.

features

event reminder

When an event reminder happens:

To see reminder details, press the **View** key.
To close the reminder, press the **Back** key.

send datebook event to another device

Send a datebook event to another phone, computer, or device:

⬅️ > 🗓️ **Tools** > **Calendar**, scroll to the day, press ⬅️, scroll to the event, press **Options** > **Send**

features

print datebook month, week, or day over Bluetooth™ connection

You can use a Bluetooth wireless connection to send a datebook month, week, or day from your phone to a printer.


 >  **Tools** > **Calendar**

Go to the month, week, or day view and press **Options** > **Print**.

For more about Bluetooth connections, see page 24.

create voice message

 >  **Multimedia** > **Voice Message**

Press . When prompted, speak into the phone.

Note: Recording phone calls is subject to laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.

features

play voice record



Play back a voice record:

 >  **Multimedia** > **Media Finder** > **Voice Notes**
> **All Voice Notes** > *voice record*

calculator

 >  **Tools** > **Calculator**

currency converter

 >  **Tools** > **Calculator**, then press **Options** > **Exchange Rate**

Enter exchange rate, press the **Ok** key, enter amount, and press **Options** > **Convert Currency**.



security

features

SIM/USIM PIN

Caution: If you enter an incorrect PIN code three times before the correct code, your SIM/USIM card is disabled and your display shows **SIM Blocked**.




Lock or unlock the SIM/USIM card:

•  >  Settings > Security > SIM PIN

lock feature

•  >  Settings > Security > Lock Application

fun & games

Note: Icons next to a picture, sound, or other object can indicate if the file is locked () , or if it is stored on your phone () or on your memory card () .




For basic information on the camera, see page 32.

features

view, delete, or manage pictures

Manage photos, pictures, and animations:




•  >  Multimedia > Media Finder > Pictures > All Pictures

To **copy or move** a file from your memory card () to your phone memory () , highlight it in the list and press **Options > Manage > Copy or Move > Phone**. You cannot copy or move some copyrighted files. 

features




view, delete, or manage video clips

 >  **Multimedia** > **Media Finder** > **Videos**
> **All Videos**

To **copy or move** a file from your memory card () to your phone memory (), highlight it in the list and press **Options** > **Manage** > **Copy** or **Move** > **Phone**. You cannot copy or move some copyrighted files. 

start micro-browser

Just press .


Your phone reads micro-browser settings from the SIM/ USIM card. When you remove the SIM/ USIM card, your phone clears the browser cache. To edit your settings, press  >  **WebAccess**
> **Web Sessions**. 

features

download objects from Web page



Download a picture, sound, or other object from a Web page:

Press , go to the page that links to the file, scroll to the link, and select it.

Note: Normal airtime and/or carrier usage charges apply.

Web sessions



A *Web Session* stores settings that your phone uses to access the Internet. To select or create a Web session:

 >  **WebAccess** > **Web Sessions**

features

clear micro-browser history



Clear the micro-browser's history, cache, or cookies:

•◉ > WebAccess > Browser Setup
> Clear History, Reset Cache, or Clear Cookies

download game or application



You can download a Java™ game or application the same way you download pictures or other objects:

Press , go to the page that links to the file, scroll to the link, and select it.

Note: Normal airtime and/or carrier usage charges apply.

features

start game or application



Start a Java™ game or application:

•◉ > Games & Apps, scroll to the game or application, press the *center key* •◉

Note: To install and run games stored on your memory card, press

•◉ > Games & Apps > [Install New].

aeroplane mode

You can switch your phone to aeroplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an aeroplane, without interfering with aeroplane communications.

•◉ > Settings > Aeroplane Mode > On

You can make the aeroplane mode option appear whenever you turn on your phone:

•◉ > Settings > Prompt At Startup > On

MyMobileSoft.com

Introduction

MyMobileSoft.com¹ provides download of both free and paid software for your Motorola handset. Depends on each model, you may download games, ring tones, screen savers, wall papers, e-books, financial and others software from MyMobileSoft.com.


1. All software and applications contained on MyMobileSoft.com are third party products and provided as is. Motorola or its subsidiaries make no representations or warranties, expressly or impliedly. By way of example but not of limitation, Motorola or its subsidiaries make no representations or warranties of merchantability or fitness for a particular purpose, or that the use of the software and applications will not

infringe any intellectual property rights. Motorola or its subsidiaries shall not be liable for any damages of any kind arising out of or relating to the use or inability to use the software and applications and services thereof. Amendment and availability of these software and applications are subject to change without any prior notice.

For more information, please visit the internet website:

www.mymobilesoft.com

Access to MyMobileSoft.com²

Press  > **Web Shortcuts**

OR

Press  > **WebAccess** > **Go To Page**

- MotoMusic
(<http://www.MotoMusic.com.hk>)

- MyMobileSoft Download Fun
(<http://hk.mymobilesoft.com>)
- MyMobileSoft Mobile Portal
(<http://mobile.mymobilesoft.com>)

This link guides you to the service of MyMobileSoft.com, which provides software and applications for your newly bought Motorola Mobile Phone.

2. You need to subscribe WAP service from your local operators, please make sure that you set up your handset correctly with appropriate parameters provided by your local operators.

www.mymobilesoft.com
Unlimited surprises waiting for
you to download

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.70 W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as

described in this user guide.² In this case, the highest tested SAR value is 1.14 W/kg.¹

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the

need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a “hands-free” device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int./peh-emf>

index

A

accessories 18, 78
accessory connector port 1
active line indicator 45
aeroplane mode 87
alarm clock 81
alarm indicator 45
alert
 set 50, 51, 53
 turn off 50, 53, 58
animation 85
answer a call 22, 57
attach a number 59, 62
audio player 30

B

backlight 56

battery 20, 21
 extending battery life 19
battery indicator 45
battery life, extending 55, 56, 57
Bluetooth connection
 datebook entry, printing 83
 datebook entry, sending 83
 description 24
 messages, printing 73
 phonebook entries 71
 restricting access 29
brightness 56
browser messages 75
browser. See micro-browser

C

cables 41

- calculator 83
- call
 - answering 22, 57
 - barring 52, 65
 - divert 64, 65
 - end 22
 - ending 22, 36
 - making 22
 - timers 77
 - waiting 64
- call divert indicator 45
- caller ID 59, 60, 69
- camera 32
- car kit 78
- categories 69
- center key 1, 50
- center select key 18
- clock 54
- codes 51, 52
- conference call 64
- copy files 25

- costs, tracking 78
- D**
- data call 79
- data indicator 44
- date, setting 54
- datebook 82
- dial a phone number 22, 66
- dialed calls 58
- digit dial 62
- digital audio 30
- display 3, 43, 56
- divert calls 64, 65
- downloaded files
 - from Web pages 86
 - in messages 73
- DTMF tones 66

- E**
- earpiece volume 50
- email

- reading and managing 73
- sending 72
- settings 74
- emergency number 60
- end a call 22, 36
- end key 1, 22
- Enter Unlock Code message
 - 52
- external display 34, 51

- F**
- fax call 79
- fixed dial 66
- flip 22, 57

- G**
- games 86
- GPRS indicator 44
- group mailing list 70

- H**
- handsfree speaker 51
 - headset 78
 - headset jack 1
 - hold a call 63
 - home screen 3, 43, 76
 - hot message 38
- I**
- in-call indicator 45
 - Incoming Call message 60
 - information services 75
 - international access code 63
 - iTAP text entry mode 47
- J**
- Java applications 86
- K**
- keypad 57, 76
- L**
- language 75
 - linking. See Bluetooth connection
 - lock
 - application 84
 - phone 52
 - SIM card 84
 - Low Battery message 45
- M**
- make a call 22
 - master clear 77
 - master reset 77
 - Media Finder 30
 - memory card 39
 - menu 3, 18, 43, 75, 76
 - menu icons 43, 76
 - message 72, 74
 - message alerts 53
 - message indicator 37, 45
 - message reminders 76
 - micro-browser 75, 85, 86
 - Missed Calls message 60
 - MMS, defined 37
 - MP3 sound files 30, 31
 - multimedia message 37, 72, 74
 - mute a call 63
- N**
- name dial 67
 - navigation key 1, 18, 50
 - network settings 81
 - notepad 63
 - number. See phone number
 - numeric entry mode 49
- O**
- object exchange 25
 - open to answer 57
 - optional accessory 18

optional feature 18

P

pairing. See Bluetooth connection

passwords. See codes

personalise 75

phone number 23

phonebook 59, 62, 67

photo 32, 85

picture 85

picture ID 60, 69

PIN code 21, 52, 84

PIN2 code 52

power key 1, 21

printing 27

Q

quick dial 66

R

received calls 58

recent calls 58

redial 59

reminders 76

restrict calls 65

return a call 60

ring style indicator 45

ring style, setting 50, 51, 53

ringer ID 60, 68, 75

ringer volume 50, 76

roam indicator 44

S

safety information 10

screen saver 55

scrolling 75

security code 51

send key 1, 22

service dial 66

signal strength indicator 44

SIM Blocked message 21, 84

SIM card 18, 21, 52, 66, 74, 84

skin 56

smart key 50, 51, 76

soft keys 1, 43, 76

software update 81

speakerphone 78

speed dial 67

store your number 23

symbol entry mode 49

synchronizing 80

T

tap text entry mode 48

telephone number. See phone number

text entry 46

text message 72, 74

theme 56

time zone 54
time, setting 54
timers 77
transfer a call 64
turn on/off 21

U

unlock
 application 84
 phone 21, 52
 SIM card 84
unlock code 51, 52
USB cables 41

V

video clip 85
videos 35
voice dial 62, 67, 78
voice message 72
voice record 83
voicemail 61

voicemail message indicator
 45, 61
volume 50, 76

W

wallpaper 55
Web pages 85
Web sessions 86

Y

your phone number 23

www.motorola.com.hk



Please use Motorola Original Accessories



6887460Z27

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc.®
Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners.
©2006 Motorola, Inc. All rights reserved.

Printed in PRC.