

User Guide

**LG5400**

# Contents

<b>Welcome</b> .....	<b>7</b>
Check Accessories .....	7
Important Information .....	7
FCC RF Exposure Information .....	10
<b>Phone Overview</b> .....	<b>12</b>
<b>Menus Overview</b> .....	<b>14</b>
<b>Getting Your Phone Started</b> .....	<b>16</b>
The Battery .....	16
Turning the Phone On and Off .....	17
Screen Icons .....	18
Making Calls .....	19
Receiving Calls .....	19
<b>Quick Access to Convenient Features</b> .....	<b>20</b>
Mute Function .....	20
Volume Quick Adjustment .....	20
Call Waiting .....	20
Caller ID .....	21
Speed Dialing .....	21
<b>Entering and Editing Information</b> .....	<b>22</b>
Text Input .....	22
Text Input Examples .....	24
<b>Contacts in Your Phone's Memory</b> .....	<b>26</b>
The Basics of Storing Contacts Entries .....	26
Options to Customize Your Contacts .....	28
Adding or Changing the Group .....	28
Changing the Call Ringer .....	29

Adding or Changing the Memo	29
Changing the Secret Setting	30
Adding Speed Dial	30
Editing Contacts Entries	31
Adding Another Phone Number	31
Default Numbers	32
Editing Stored Phone Numbers	32
Editing Stored Names	33
Deleting	34
Deleting a Phone Number from a Contact	34
Deleting a Contact Entry	34
Additional Ways to Delete a Contact	35
Deleting a Speed Dial	35
Phone Numbers With Pauses	36
Storing a Number With Pauses	36
Adding a Pause to an Existing Number	37
Searching Your Phone's Memory	38
Scrolling Through Your Contacts	38
Searching by Letter	38
Searching Options	39
Making a Call From Your Phone's Memory	40
From Contacts	40
From Recent Calls	40
Prepending a Stored Number	41
<b>Using Phone Menus</b>	<b>42</b>
Menu Access	42
<b>Call History (Menu 1)</b>	43
Recent Calls	43
Outgoing Calls	44

Incoming Calls	44
Missed Calls	44
Erase Calls	45
Call Timer	45
<b>Phone Book (Menu 2)</b>	46
Find Name	46
Add New Entry	47
Speed Dials	47
Groups	48
<b>Messaging (Menu 3)</b>	49
New Message Alert	49
Send Message	50
Web Msg	52
Inbox	52
Out of Memory Warning	52
Outbox	53
Saved	54
Erase	55
Voicemail	55
Checking Your Voice Mail Box	55
<b>Tools (Menu 4)</b>	56
EZ Tips	56
Calculator	56
World Clock	57
<b>Web (Menu 5)</b>	57
Ending a MiniBrowser Session	58
Navigating Through the Browser	58
Using Bookmarks	60
<b>Downloads (Menu 6)</b>	62

<b>Settings (Menu 7)</b> .....	64
Sounds .....	64
Ringers .....	64
Key Tones .....	65
Volume .....	65
Alerts .....	66
Display .....	66
Greeting .....	66
Backlight .....	67
Screens .....	67
Contrast .....	67
Menu Style .....	68
Theme Color .....	68
Clock .....	68
Text Input Font .....	68
Data Setting .....	69
Roaming .....	69
Set Mode .....	69
Serving System .....	69
Location .....	70
Messaging .....	70
Display Pop-Up .....	70
Delivery Receipt .....	70
Message Alerts .....	70
Auto Delete .....	71
Signature .....	71
Callback # .....	71
Edit Voice Mail Number .....	71
Canned Msgs .....	71
Push Option .....	71

Security .....	72
Lock Phone .....	72
Change Lock .....	72
Special # .....	73
Erase Phone Book .....	73
Reset Default .....	73
Airplane Mode .....	74
Setup/Others .....	74
Shortcut .....	74
Call Answer .....	74
Auto Answer .....	74
Language .....	75
TTY Mode .....	75
One Touch Dial .....	75
Phone Info .....	75
<b>Planner (Menu 8)</b> .....	76
Schedule .....	76
Alarm Clock .....	77
Notepad .....	78

<b>Safety</b> .....	<b>79</b>
TIA Safety Information .....	79
Exposure to Radio Frequency Signal .....	79
Antenna Care .....	79
Phone Operation .....	79
Tips on Efficient Operation .....	80
Driving .....	80
Electronic Devices .....	80
Pacemakers .....	80
Hearing Aids .....	81

## Welcome

Other Medical Devices .....	81
Health Care Facilities .....	81
Vehicles .....	81
Posted Facilities .....	81
Aircraft .....	81
Blasting Areas .....	81
Potentially Explosive Atmosphere .....	82
For Vehicles Equipped with an Air Bag .....	82
Charger and Adapter Safety .....	82
Battery Information and Care .....	82
Safety Information .....	83
FDA Consumer Update .....	86
Consumer Information on SAR .....	92
<b>Accessories .....</b>	<b>94</b>
<b>Warranty Information .....</b>	<b>96</b>
<b>Index .....</b>	<b>98</b>

Congratulations for choosing the advanced and compact LG5400 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this phone offers:

- Large, easy-to-read, 8-line backlight LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- 19-key keypad.
- Long battery standby and talk time.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and French) capabilities.

### Check Accessories

Your mobile phone comes with a rechargeable battery and an AC adaptor. Please verify that these accessories are included.

### Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

#### FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

#### Industry Canada Compliance

This phone complies with Industry Canada RSS 133. This phone complies with the Class B limits for radio noise emissions as set out in the interference causing standard entitled "Digital Apparatus" ICES-003 of Industry Canada.

#### Technical Details

The LG5400 is a dual-band phone that operates on both Code Division Multiple Access (CDMA) frequencies: cellular services at 800 MHz and Personal Communication Services (PCS) at 1.9 Ghz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard Handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base station Transmission System), and MS (Mobile Station). The following table lists some major CDMA standards.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A	CDMA Dual-Mode Air Interface
	TSB-74	14.4kbps radio link protocol and inter-band operations
	ANSI J-STD-008 TIA/EIA-IS2000	IS-95 adapted for PCS frequency band cdma2000 1xRTT Air Interface
Network	TIA/EIA/IS-634	MAS-BS
	TIA/EIA/IS/651	PCSC-RS
	TIA/EIA/IS-41-C	Intersystem operations
	TIA/EIA/IS-124	Nom-signaling data comm.
Service	TIA/EIA/IS-96-B	Speech CODEC
	TIA/EIA/IS-99	Async Data and Fax
	TIA/EIA/IS-637	Short message service
	TIA/EIA/IS-657	Packet Data
	IS-801	Position Determination Service (gpsOne)
Performance	TIA/EIA/IS-707-A	High Speed Packet Data
	TIA/EIA/IS-97	Cellular base station
	TIA/EIA/IS-98	Cellular mobile station
	ANSI J-STD-018	PCS personal station
	ANSI J-STD-019	PCS base station
	TIA/EIA/IS-125	Speech CODEC

\* TSB -74: Protocol between an IS-95A system and ANSI J-STD-008 1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

#### FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by U.S. , Canadian and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

#### Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 3/4 inches (2 cm) from the body. To comply with FCC and IC RF exposure requirements, a minimum separation distance of 3/4 inches (2 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 3/4 inches (2 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

#### Vehicle-Mounted External Antenna

(Optional, if available.)

A minimum distance of 8 inches (20 cm) must be maintained between the user / bystander and the vehicle-mounted external antenna to satisfy FCC and IC RF exposure requirements. For more information about RF exposure, visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

#### Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement of antenna.

## Phone Overview



1. Earpiece
2. Flip Flip open the case to answer an incoming call and close to end the call.
3. LCD Screen Displays messages and indicator icons.
4. Left Soft Key Use to display the function setting menu.
5. Side Keys Use to adjust the ringer volume in standby mode and the earpiece volume during a call.
6. Send Key Use to place or answer calls.
7. Headset Jack
8. Right Soft Key Use to select an action within a menu.
9. Navigation Key Use for quick access to Messaging, Web, and Downloads.
10. End/Power Key Use to turn the power on/off and to end a call. Also return to the main menu display screen.
11. Clear Key Press to delete a single space or character. Press and hold to delete entire words. Press this key once in a menu to go back one level.
12. Alphanumeric Keypad Use to enter numbers and characters and select menu items.
13. Microphone

## Menus Overview

Press Left Soft Key  Menu. Press  to Scroll.

### Call History

1. Recent Calls
2. Outgoing Calls
3. Incoming Calls
4. Missed Calls
5. Erase Calls
  1. Recent Calls
  2. Outgoing Calls
  3. Incoming Calls
  4. Missed Calls
  5. All Calls
6. Call Timer
  1. Last Call
  2. Home Calls
  3. Roam Calls
  4. All Calls

### Phone Book

1. Find Name
2. Add New Entry
3. Speed Dials
4. Groups

### Messaging

1. Send Message
2. Web Msg
3. Inbox
4. Outbox
5. Saved
6. Erase
7. Voicemail

### Tools

1. EZ Tips
2. Calculator
3. World Clock

### Web

1. Start Web

### Downloads

- Games
- Ringers
- Screen Savers
- Applications
- Other

### Settings

1. Sounds
  1. Ringers
  2. Key Tones
  3. Volume
  4. Alerts
2. Display
  1. Greeting
  2. Backlight
  3. Screens
  4. Contrast
  5. Menu Style
  6. Theme Color
  7. Clock
  8. Text Input Font
3. Data Setting
  1. Connection
  2. Method
  3. Speed
4. Roaming
  1. Set Mode
  2. Serving System
5. Location
6. Messaging
  1. Display Pop-Up
  2. Delivery Receipt
  3. Message Alerts
  4. Auto Delete
5. Signature
6. Callback #
7. Edit Voice Mail Number
8. Canned Msgs
9. Push Option
7. Security
  1. Lock Phone
  2. Change Lock
  3. Special #
  4. Erase Phone Book
  5. Reset Default
8. Airplane Mode
9. Setup/Others
  1. Shortcut
  2. Call Answer
  3. Auto Answer
  4. Language
  5. TTY Mode
  6. One Touch Dial
0. Phone Info

### Planner

1. Schedule
2. Alarm Clock
3. Notepad

## Getting Your Phone Started

### The Battery

**NOTE:** It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

### Installing the Battery

To install the battery, insert the bottom of the battery into the opening on the back of the phone. Push the battery down until the latch clicks.

### Removing the Battery

Turn the power off. Lift the release latch to detach the battery.

### Charging the Battery

 
To use the charger provided with your phone:

Warning! Use only the charger provided with the phone. Using any charger other than the one included with the LG5400 may damage your phone or battery.

1. Plug the round end of the adapter into the phone's charger jack and the other end into an electrical outlet.
2. The charge time varies depending upon the battery level. The maximum charge time for a fully discharged battery is 3.5 hours.


### Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying **LOW BATTERY WARNING!** If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.



### Turning the Phone On and Off

#### Turning the Phone On

1. Install a charged battery or connect the phone to an external power source such as a cigarette lighter charger or hands-free car kit.
2. Press  for a few seconds until the LCD screen lights up.

**NOTE:** Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

#### Turning the Phone Off

1. Press and hold  until the display turns off.

### Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

## Getting Your Phone Started

### Screen Icons

When the phone is powered on, the top line of the LCD screen displays icons indicating the status of the phone.

Icon	Description		
	Signal strength indicator. The strength of the signal received by the phone is indicated by the number of bars displayed.		
	No service indicator. The phone is not receiving a system signal.		
	In use indicator. A call is in progress. * No icon indicates the phone is in standby mode.		
	Roaming		Digital
	Silence All		
	IS-2000		
	3G Services		
	Vibrate Mode		
	SSL		
	TTY Mode		
	Battery charging		Battery strength
	Location On		Location Off
	New text msgs		
	New voicemails		
	New text&voice		

### Making Calls

1. Make sure the phone is turned on. If not, press and about 3 seconds.
2. Enter the phone number (include the area code if needed).
3. Press .

If the phone is locked, enter the lock code.

*Call Failed* - indicates the call did not go through.

*Restricted* - indicates outgoing calls are in restricted mode.

**NOTE:** The phone number and entry name appear on the display when you type in the speed dial number and hold the last digit. Menu -> Settings -> Security -> Enter Lock Code -> Change Lock -> Enter -> OK

4. Press to end the call.

### Correcting Dialing Mistakes

If you make a mistake while dialing a number, press once to erase the last digit entered or hold down for at least 2 seconds to delete all digits.

### Redialing Calls

1. Press twice to redial the last number you dialed. The last 30 numbers are stored in the call history list and you can also select one of these to redial.

### Receiving Calls

1. When the phone rings or vibrates press to answer.

**NOTE:** If you press or the side keys while the phone is ringing, the ringing or vibration is muted for that call.

2. Press or End key to end the call.

## Quick Access to Convenient Features

### Mute Function

The Mute function prevents the other party from hearing your voice, but allows you to hear the other party.

#### Mute Quick Activation

1. Press Left Soft Key  Mute during a call.

#### Mute Quick Cancellation

1. Press Left Soft Key  again.

### Volume Quick Adjustment



Use the side keys to adjust the earpiece and ringer volumes. The upper key increases the volume and the lower key decreases the volume.

- Earpiece volume can be adjusted during a call.
- Ringer volume can be adjusted while the phone is ringing.

*NOTE: Key beep volume is adjusted through the Menu.*

### Call Waiting

Your cellular service may offer call waiting. While a call is in progress, two beeps indicate another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. Press  to receive a waiting call.
2. Press  again to switch between calls.


### Caller ID

Caller ID displays the number of the person calling when your phone rings. If the caller's identity is stored in Contacts, the name appears with the number. Check with your service provider to ensure they offer this feature.


### Speed Dialing

Speed Dialing is a convenient feature that allows you to make phone calls quickly and easily with a few keystrokes. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. Speed Dial number 1 is always for Voice mail.

#### Dialing Speed Dials from 2 to 9

1. Press and hold the Speed Dial number.  
OR  
Enter the Speed Dial number and press .

#### Dialing Speed Dials from 10 to 99


1. Press the first digit and then press and hold the key of the last digit.  
OR  
Enter the first and second digits and press .

 
## Entering and Editing Information


### Text Input


You can input and edit your Greeting, Schedule, Phone Book, and Messages.


#### Key Functions


 Right Soft Key (or Left Soft Key): Press to scroll through the following text input modes:  
T9Word -> Abc -> 123 -> Symbols ->  
Smileys -> Canned Msgs

 Shift: Press to change case.  
T9 text: T9Word -> T9WORD -> T9word  
Abc text: Abc -> ABC -> abc



 Next: In T9 mode, press to display other matching words.

 Space: Press to complete a word and insert a space.

 Clear: Press to delete a single space or character. Hold to delete words.

 Punctuation: In T9 mode, press to insert punctuation in a word and complete a sentence.

### Text Input Modes

There are five modes for entering text, numbers, special characters, and punctuation. In a text entry field, pressing Right Soft Key  (or Left Soft Key ) displays a pop-up list of text modes.

#### T9Word (T9) Mode

Use to type text using one keystroke per letter. The phone translates keystrokes into common words by using the letters on each key and a compressed database.

#### Abc (Multi-tap) Mode

Use to add words to the T9 database.

#### 123 (Numbers) Mode

Use to type numbers using one keystroke per number.

#### Symbols Mode

 
Insert special characters or punctuation. You may use any of the 35 special characters. When the cursor is location where you want the special character, switch to Symbol mode. Press the Navigation Key to cycle through and select the characters.

#### Smileys Mode

Use to insert smiley graphics. There are 36 smiley characters.

#### Canned Msgs

#### Changing Letter Case

Using T9 and Abc text input modes you can set the capitalization. Press  to cycle through the following:

#### Initial Cap (T9Word / Abc)

Only the first letter is capitalized. All subsequent letters are lower case.

## Entering and Editing Information

Caps Lock (T9WORD / ABC)





All letters are capitalized.

Lower Case (T9word / abc)



 



 
All letters are in lower case.

### Text Input Examples



















Display the text modes and select a text mode:

1. In a text entry field, press Right Soft Key  (or Left Soft Key ) to display text modes.
2. Press  to highlight the text input mode you want to use.
3. Press  to select the highlighted text input mode.


Using Abc (Multi-tap) Text Input






1. Press Right Soft Key  (or Left Soft Key ) to change to Abc mode.
2. Press  to change to ABC Caps Lock.
3. Press    .  
LG is displayed.

Using T9 Mode Text Input

1. Press Right Soft Key  (or Left Soft Key ) to change to T9Word mode.
2. Press    .
3. Press  to complete the word and add a space.
4. Press           .  
*Call the office.* is displayed.


 














Using the NEXT Key

After you have finished entering a word, if the word displayed is not the one you want, press  to display additional choices of words from the database.

1. Press    .
- Good* is displayed.
2. Press .
- The display gives you additional choices such as: *Home, Gone, Hood*, etc.

Adding Words to the T9 Database

If a word is not in the T9 database, add it using Abc (multi-tap) mode text entry. The word is automatically added to the T9 database.



1. Press Right Soft Key  (or Left Soft Key ) to change to Abc (multi-tap) mode.
2. Press      .
- Bop* is displayed.
3. Press Right Soft Key  (or Left Soft Key ) to change to T9 mode to add the word Bop to the T9 database.
4. Press  to erase the existing word.
5. Press   .
- Cop* is displayed.
6. Press  .
- Bop* is displayed.

## Contacts in Your Phone's Memory

  
### Contacts Entries

This allows you to have easy access to your most frequently dialed phone numbers. You may store up to 200 entries with up to 6 phone numbers each. Each entry may be up to 22 characters. Each phone number may be up to 48 digits.

### The Basics of Storing Contacts Entries



 1. From standby mode enter the phone number you want to save (up to 48 digits).
2. Press Left Soft Key Save.
3. Use to select a Label and press .  
Home / Home2 / Office / Office2 / Mobile / Mobile2 / Pager / Fax / Fax2 / None
4. Use to select New Name or Existing and press .  
*NOTE: Use Existing to add another phone number to a contact already stored in memory.*
5. Enter a name for the phone number (up to 22 characters) and press .  
A confirmation message is displayed briefly.



*NOTE: To skip name entry, press to go to the next step.*

*NOTE: If the information is complete, press to return to the Main Menu screen.*






*NOTE: To further customize the Contact entry, press Left Soft Key Done.*

6. Highlight Speed Dial to save the entry as a Speed Dial, and press .
7. Enter a Speed Dial digit (e.g., 2) use the keypad and press or use to highlight the Speed Dial location and press .
8. Press Left Soft Key Done.

## Contacts in Your Phone's Memory










### Options to Customize Your Contacts

Once basic phone number and name information is stored in your Contacts, you can edit and/or customize the entries.

1. From standby mode, press Right Soft Key  Search. Your Phone Book display alphabetically.
2. Select the appropriate contact and press .
3. Press Left Soft Key  Edit to access the Edit Entry screen.
4. Use  to highlight the information you want to customize and press .

### Adding or Changing the Group










Allows you to manage your Contacts entries by organizing them into groups.

1. From standby mode, press Right Soft Key  Search. Access your Contacts and use  to highlight an entry, then press .
2. Press Left Soft Key  Edit.
3. Use  to highlight No Group and press .
4. Use  to select the Group and press . No Group / Family / Friends / Colleagues / Business / School
5. Press Left Soft Key  Done to continue editing the Contact entry.

**NOTE:** You can change the name of the group, add groups, and delete groups.








### Changing the Call Ringer

Allows you to identify who is calling by setting different ringers for different phone numbers in your Contacts. It is automatically set to the default ringer when the Contact is saved.

1. From standby mode, press Right Soft Key  Search. Access your Contacts and use  to highlight an entry, then press .
2. Press Left Soft Key  Edit.
3. Use  to highlight Default and press .
4. Use  to select the Ringer Type and press .
5. Press Left Soft Key  Done to continue editing the Contact entry.

### Adding or Changing the Memo









Allows you to enter up to 48 characters as a memo to the Contact entry.

1. Access your Contacts and use  to highlight an entry, then press .
2. Press Left Soft Key  Edit.
3. Use  to highlight Memo and press .
4. Enter text and press .
5. Press Left Soft Key  Done to continue editing the Contact entry.













## Contacts in Your Phone's Memory

### Changing the Secret Setting

Allows you to hide certain entries from being displayed when the Contacts are searched.

1. Access your Contacts and use  to highlight an entry , then press .
2. Press Left Soft Key  Edit.
3. Use  to highlight Not Secret and press .
4. Use  to select the Secret setting and press .
5. Press Left Soft Key  Done to continue editing the Contact entry.








### Adding Speed Dial

1. Access your Contacts and use  to highlight an entry , then press .
2. Press Left Soft Key  Edit
3. Use  to highlight the phone number you want to set with a Speed Dial and press .
4. Press  to highlight the Speed Dial, and press .
5. Enter a Speed Dial digit.  
Use the Keypad and press , or use  to highlight the Speed Dial digit and press .
6. Press Left Soft Key  Done to continue editing the Contact entry, or Press  to return to the Main Menu.










### Editing Contacts Entries

#### Adding Another Phone Number

From the Main Menu Screen

1. From standby mode, enter the phone number you want to save (up to 48 digits).
2. Press Left Soft Key  Save.
3. Use  to highlight a Label and press .  
Home / Home2 / Office / Office2 / Mobile / Mobile2 / Pager / Fax / Fax2 / None
4. Use  to highlight Existing and press .
5. Use  to highlight the existing Contact entry and press .  
A confirmation message is displayed.

Through Contacts

1. From standby mode, press Right Soft Key  Search.  
Your Contacts display alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  Edit.
4. Use  to highlight Add Number, then press .
5. Enter the number and press .
6. Use  to highlight a Label, then press .  
A confirmation message is displayed.








## Contacts in Your Phone's Memory

### Default Numbers








The phone number saved when a Contact is created is the Default Number. If more than one number is saved in a Contact entry, another number can be saved as the Default Number.

*NOTE: The Default Number cannot be deleted by itself. The entire Contact entry can be deleted or another number can be set as the Default Number allowing you to delete the original saved number and keep the Contact entry.*








### Changing the Default Number

1. From standby mode, press Right Soft Key  Search. Your Contacts display alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  Edit.
4. Use  to highlight the phone number you want to set as the Default Number and press Right Soft Key  Options.
5. Press  Set as Default#. A confirmation message is displayed.

### Editing Stored Phone Numbers

1. From standby mode, press Right Soft Key  Search. Your Contacts display alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  Edit.
4. Use  to highlight the phone number and press .
5. Edit the phone number as necessary and press .









### Editing Stored Names

1. From standby mode, press Right Soft Key  Search. Your Contacts display alphabetically.
2. Use  to highlight the Contact entry you want to edit, then press .
3. Press Left Soft Key  Edit.
4. Use  to highlight the name and press .
5. Edit the name as necessary and press .







## Contacts in Your Phone's Memory

### Deleting


Deleting a Phone Number from a Contact

1. Press Right Soft Key  Search.
2. Use  to highlight the Contact entry, then press .
3. Press Left Soft Key  Edit.
4. Use  to highlight the phone number to be deleted.
5. Press Right Soft Key  Options.
6. Press  Erase Number.
7. Press  Erase number.  
A confirmation message is displayed.



 











Deleting a Contact Entry

1. Press Right Soft Key  Search.
2. Use  to highlight the Contact entry to be deleted, then press .
3. Press Right Soft Key  Options.
4. Press  Erase entry.
5. Press  Erase.  
A confirmation message is displayed.

Additional Ways to Delete a Contact

Once you have accessed your Contacts, pressing Right Soft Key  Options at any point provides the option to erase the entry.

Deleting a Speed Dial


1. Press Right Soft Key  Search.
2. Use  to highlight the Contact entry, then press .
3. Press Left Soft Key  Edit.
4. Use  to highlight the phone number with the Speed Dial to be deleted, then press .
5. Use  to highlight the Speed Dial number and press .
6. Use  to highlight the Speed Dial entry and press .
7. Use  to highlight the Speed Dial location.
8. Press Right Soft Key  Options.
9. Press  Remove.
10. Press  Yes.  
A confirmation message is displayed.

## Contacts in Your Phone's Memory

### Phone Numbers With Pauses

When you call automated systems such as voice mail or credit billing numbers, you often have to enter a series of numbers. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (P, T). There are two different types of pauses you can use when storing a number:










Hard pause (P)

The phone stops dialing until you press Left Soft Key  Release to advance to the next number.















2-sec pause (T)

The phone waits 2 seconds before sending the next string of digits.

### Storing a Number With Pauses

1. Press Left Soft Key  Menu.
2. Press  Phone Book.
3. Press  Add New Entry.
4. Enter the number.
5. Press Right Soft Key  Pause.
6. Use  to select pause type and press .  
Hard pause / 2-sec pause
7. Enter additional number(s) (e.g. : pin number or credit card number) and press .
8. Use  to select a Label and press .
9. Enter a name (up to 22 characters).  
A confirmation message is displayed.

### Adding a Pause to an Existing Number

1. Press Right Soft Key  Search.
2. Use  to highlight the Phone Book entry to edit, then press .
3. Press Left Soft Key  Edit.
4. Use  to highlight the number then press .
5. Use  to highlight the number then press .
6. Press Left Soft Key  Pause.
7. Use  Hard pause or  2-sec pause.
8. Enter additional number(s) and press .
9. Use  to select the label type and press .

A confirmation message is displayed.



## Contacts in Your Phone's Memory

### Searching Your Phone's Memory


The LG5400 phone is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters or numbers against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or edit. There are several ways to search:

- Scrolling Alphabetically
- Searching by Letter
- Searching by Options
  - Name
  - Number
  - Speed Dial#
  - Group







 





#### Scrolling Through Your Contacts

1. Press Right Soft Key  Search.  
Contacts list is displayed alphabetically.
2. Use  to scroll through the list.

#### Searching by Letter

1. Press Right Soft Key  Search.  
Contacts list is displayed alphabetically.
2. Press (or press repeatedly) the key on the keypad that corresponds with the search letter.


### Searching Options

1. Press Right Soft Key  Search.
2. Press Right Soft Key  Options.
3. Select the search criteria using  (or press the corresponding number on the keypad):
  -  Name - Enter the character(s) to search for (such as the first letters of the name).
  -  Number - Enter the number(s) to search.
  -  Speed Dial# - Enter the speed dial number(s) to search.
  -  Group - Use  to highlight the group to search for and press .
4. A list of matches is displayed. Use  to highlight a matched entry.
5. Press  to see more information or press  to place a call.






## Contacts in Your Phone's Memory

### Making a Call From Your Phone's Memory





Once you have stored phone numbers into your Contacts, you can place calls to those numbers quickly and easily.

- Pressing  after you've searched for a phone number in Contacts or Recent Calls.
- Using Speed Dialing



#### From Contacts

1. Press Right Soft Key  Search.
2. Use  to select the Contact entry and press .
3. Use  to select the phone number.
4. Press  to place the call.

#### From Recent Calls





1. Press Left Soft Key  Menu.
2. Press  Call History.
3. Use  to select the type of Recent Calls and press .

Outgoing Calls / Incoming Calls / Missed Calls /  
Erase Calls / Call Timer

4. Use  to highlight the phone number.
5. Press  to place the call.


### Prepending a Stored Number

Prepend can be used if you are out of your home system area and need to add the area code to an existing number. When a Contacts entry or message callback number shows up on the display, you can add to the beginning of the original number. However, you cannot edit the original number.

1. Press  to access your Latest Call list and highlight a phone number.
2. Press Right Soft Key  Options.
3. Press  Prepend.
4. Enter the prepend digits to the phone number.
5. Press  to place the call.





## Using Phone Menus


### Menu Access


Press Left Soft Key  Menu to have access to eight phone menus. There are two methods to access menus and submenus:

- Use the navigation key to highlight and select, or
- Press the number key that corresponds to the menu or submenu.

For example:


1. Press Left Soft Key  Menu.  
Nine menu items are displayed.  
Use  to scroll through the list of menus.
2. Press the appropriate number key corresponding to the menu item you want to select.  
The sub-menu list will be displayed.
3. Press the appropriate number key corresponding to the sub-menu you want to access.
4. Use  to highlight your preferred setting and press  to select it.

**NOTE:** Press  to go back one step while accessing the menu or selecting a setting.

**NOTE:** Press  to cancel without saving.

### Call History (Menu )

There are six Call Menus that can be accessed by the phone. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

**NOTE:** To view a quick list of all your all calls, press  from the standby screen.




 


#### Access and Options



1. Press Left Soft Key  Menu.






2. Press  Call History.

3. Select a sub-menu.

-  Recent Calls
-  Outgoing Calls
-  Incoming Calls
-  Missed Calls
-  Erase Calls
-  Call Timer








### Recent Calls (Menu , )

Allows you to view the list of recent calls; up to 30 numbers and entries.

1. Press , , .
2. Highlight the entry you wish to view and press  or you may place a call by pressing .








### Outgoing Calls (Menu )

Allows you to view the list of outgoing calls; up to 30 entries.

1. Press , , .
2. Use  to highlight an entry, then
  - Press  to view the entry.
  - Press  to place a call to the number.
  - Press Right Soft Key  Options to select: Save / Prepend / Erase / Erase all








### Incoming Calls (Menu )

Allows you to view the list of incoming calls; up to 30 entries.

1. Press , , .
2. Use  to highlight an entry, then
  - Press  to view the entry.
  - Press  to place a call to the number.
  - Press Right Soft Key  Options to select: Save / Prepend / Erase / Erase all








### Missed Calls (Menu )

Allows you to view the list of incoming calls; up to 30 entries.

1. Press , , .
2. Use  to highlight an entry, then
  - Press  to view the entry.
  - Press  to place a call to the number.
  - Press Right Soft Key  Options to select: Save / Prepend / Erase / Erase all






### Erase Calls (Menu )

Allows you to erase selected call list(s).

1. Press , , .
2. Use  to highlight the list of calls to erase and press .  
Recent Calls / Outgoing Calls / Incoming Calls / Missed Calls / All Calls
3. Press  Erase or  Cancel.

### Call Timer (Menu )

There are four call timers that you can use to track the number of minutes that you spend on your phone.

1. Press , , .
2. Use  to highlight a call list and press .  
Last Call / Home Calls / Roam Calls / All Calls

*NOTE: Home Calls and Roam Calls can be reset, while the Last Call and All Calls are not.*

## Using Phone Menus

### Phone Book (Menu **2<sub>ABC</sub>**)

The Phone Book Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Phone Book, the number in parenthesis represents the number of entries you have stored (up to 200).

#### Access and Options



1. Press Left Soft Key Menu.
2. Press **2<sub>ABC</sub>** Phone Book.
3. Select a sub-menu.

- **1<sub>ES</sub>** Find Name
- **2<sub>ABC</sub>** Add New Entry
- **3<sub>DEF</sub>** Speed Dials
- **4<sub>GH</sub>** Groups



### Find Name (Menu **2<sub>ABC</sub>** **1<sub>ES</sub>**)

Allows you to view your Contacts list.

1. Press , **2<sub>ABC</sub>**, **1<sub>ES</sub>**.
2. Options from here:
  - Press to scroll through your Contacts alphabetically.
  - Press Right Soft Key Options to select one of the following:
    - 1<sub>ES</sub>** Search / **2<sub>ABC</sub>** Erase
  - Press Left Soft Key New to store a new number.

### Add New Entry (Menu **2<sub>ABC</sub>** **2<sub>ABC</sub>**)

Allows you to add a new number.

**NOTE:** Using this sub-menu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

1. Press , **2<sub>ABC</sub>**, **2<sub>ABC</sub>**.
2. Enter the number and press **OK**.
3. Select the Label you want and press **OK**.
4. Enter the name and press **OK**.
5. Continue saving the entry as necessary.

### Speed Dials (Menu **2<sub>ABC</sub>** **3<sub>DEF</sub>**)



 





Allows you to view your list of Speed Dials or designate Speed Dial for numbers entered in your Contacts.

1. Press , **2<sub>ABC</sub>**, **3<sub>DEF</sub>**.
2. Use to highlight the Speed Dial position, or enter the Speed Dial digit and press **OK**.
3. Use to highlight the Contact and press **OK**.
4. Use to highlight the number and press **OK**.  
A confirmation message is displayed.

## Using Phone Menus



### Groups (Menu )

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.

1. Press , , .
2. Options from here:
  - Use  to highlight a group to view and press .
  - Press Left Soft Key  Add to add a new group to the list.
  - Use  to highlight a group and press Right Soft Key  Options to change the name of the group or delete the group.

### Messaging (Menu )


Text messages, pages, and the voice mail box become available as soon as the phone is powered on.

- Check types of messages by pressing the message key .
- Make a call to the callback number by pressing  during a message check.
- Read and edit messages saved in the outbox during transmission and send them.

The phone can store up to 131 messages (for example, 1 voice message, 50 inbox text messages, 50 outbox text messages, 30 saved text messages). The LG5400 supports up to 140 characters per message including header information. The information stored in the message is determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

#### New Message Alert



There are three ways your phone alerts you to new messages.

1. The phone displays the message on the screen.
2. One of five ring types is heard, if selected.
3. The message icon () is displayed on the display screen. In the case of an urgent message, the icon will flash and *Urgent message* is displayed.





*NOTE: If you receive the same message twice, your phone deletes the older one and the new one is stored as a Duplicate.*

 
## Using Phone Menus




### Access and Options

1. Press Left Soft Key  Menu.
2. Press  Messaging.
3. Select a sub-menu.

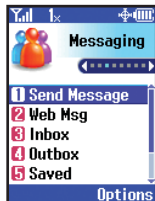

 -  Send Message: Sends a message.
-  Web Msg
-  Inbox: Shows the list of received messages.
-  Outbox: Shows the list of sent messages.






-  Saved: Shows the list of saved and draft messages.
-  Erase: Erase messages stored in the Inbox.
-  Voicemail: Shows the number of messages in voice mail box.


### Send Message (Menu )




Allows you to send text messages, pages, and e-mail transmissions. Each message has a destination (Address 1) and information (Message). These are dependent upon the type of message you want to send.

#### The basics of sending a Text Message

1. Press , , .
2. Enter the message destination in Enter Add 1.
  - SMS phone number for a text message.
  - E-mail address for an e-mail message.


3. Press .

*NOTE: To send a page, press Left Soft Key  Send.*

4. Press  to access the message screen.
5. Type your message (text or e-mail) then press .
6. Press Left Soft Key  Send.  
A confirmation message is displayed.

*NOTE: If you send an SMS message to a phone without SMS, you will still be notified that the message was sent, however the message will not be received.*

#### Customizing the Text Message using options

1. Create a new message.
2. Press Right Soft Key  Options.
3. Select the option(s) to customize.
 

Callback #	Inserts a pre-programmed callback number with your message.
Priority	Gives priority to the message. Normal / Urgent
4. Complete and send the message.

## Using Phone Menus

### Web Msg (Menu )


Web Msg are special links or message provided from the carrier to inform users of special offers, bulletins and announcements.

1. Press , , .

Web Msg is notified to the user with 4 kinds of alert. The Alert type is determined by its priority.

### Inbox (Menu )






The phone alerts you in 3 ways when you receive a new message:

- By displaying a message notification on the screen.
- By sounding a beep or vibrating, if set.
- By blinking .

Received text messages, page messages, and e-mail lists may be searched and the contents viewed. Received messages are displayed from newest to oldest.

### Out of Memory Warning





If the memory is full, no more messages can be received until enough memory space becomes available. The message *Message is rejected* is displayed and new messages are not accepted.

1. Press , , .
2. Options from here:
  - Left Soft Key  Reply.
  - Right Soft Key  Options.

Go URL	You can go directly to the site through the phone miniBrowser.
Call	Calling origination address.
Reply	Replies to the SMS with the Original message attached.
Forward	Forward a received message to other destination address.
Lock/Unlock	Locks or unlocks the selected message. locked messages can not be deleted by the Erase Inbox and Erase All functions.
Save Number	Store the callback number, e-mail address and numbers in user data include in the received message into your contacts.
Save URL	You can extract a URL string in the Text Message to save in an existing Phone Book entry.
Save Email	You can extract an email address to save over an existing email entry.
Save Canned msg	Saves the message into the Canned message list.
Erase	Deletes the selected message from the Inbox.

### Outbox (Menu )

Up to 50 sent messages can be stored in the Outbox. View lists and contents of sent messages and verify whether the transmission was successful or not.

1. Press , , .
2. Press Right Soft Key  Options.

Lock/Unlock	Locks a message so that it is not erased if the Erase Outbox or Erase All feature is used.
Erase	Deletes the selected message from the Outbox.
Erase all	Deletes the all message from the Outbox.

## Using Phone Menus

### Viewing Your Outbox

1. Select a message with and press Key.
2. Press Left Soft Key Forward.  
Press Right Soft Key Options.  
Go URL  
Call  
Resend  
Forward  
Edit  
Lock  
Save Canned msg  
Erase  
Send Message

### Saved (Menu )

Displays saved messages and draft messages.

1. Press , , .  
Select a message with and press Right Soft Key Options.  
Erase, Erase all
2. Press , , , .  
Press Left Soft Key Resend.  
Press Right Soft Key Options.  
Edit, Add Recipient, Resend, Erase

### Erase (Menu )

Allows you to erase all text messages stored in your Inbox, Outbox, or Saved Msgs Folders. You can also erase all messages at the same time.

1. Press , , .
  - Press Inbox to erase all messages stored in the Inbox.
  - Press Outbox to erase all messages stored in the Outbox.
  - Press Saved to erase all messages stored in the Saved Items folder.
  - Press All to erase all messages stored in the Inbox, Outbox, and Saved Items folder.

### Voicemail (Menu )

Allows you to view new voice messages recorded in the voice mail box. Once you exceed the storage limit, old messages are overwritten. When you have a new voice message, your phone alerts you.

### Checking Your Voice Mail Box

1. Press , , .
2. Press to view the message.
3. Options from here:
  - Press Left Soft Key Clear to delete information, and then select Clear All, Clear Icon.
  - Press to listen to the message(s).

## Using Phone Menus

### Tools (Menu $\boxed{4_{\text{CH}}}$ )

 
Your phone tools include a EZ Tips, Calculator, and World Clock.

#### Access and Options



1. Press Left Soft Key  $\leftarrow$  Menu.
2. Press  $\boxed{4_{\text{CH}}}$  Tools.
3. Select a sub-menu.

- $\boxed{1_{\text{EZ}}}$  EZ Tips
- $\boxed{2_{\text{ABC}}}$  Calculator
- $\boxed{3_{\text{DEF}}}$  World Clock

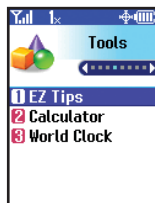

### EZ Tips (Menu $\boxed{4_{\text{CH}}}$ $\boxed{1_{\text{EZ}}}$ )

Allows you to quickly and easily calculate the amounts for a bill with the amount of the bill, the amount of the tip and the number of people as variables.

1. Press  $\leftarrow$ ,  $\boxed{4_{\text{CH}}}$ ,  $\boxed{1_{\text{EZ}}}$ .

### Calculator (Menu $\boxed{4_{\text{CH}}}$ $\boxed{2_{\text{ABC}}}$ )

Allows you to calculate simple mathematical computations. You can enter numbers up to the second decimal place.

1. Press  $\leftarrow$ ,  $\boxed{4_{\text{CH}}}$ ,  $\boxed{2_{\text{ABC}}}$ .

**NOTE:** Calculations can be made with up to 33 characters at one time (e.g., 63+78-21 would be 8 characters).

### World Clock (Menu $\boxed{4_{\text{CH}}}$ $\boxed{3_{\text{DEF}}}$ )

Allows you to determine the current time in another time zone or country.

1. Press  $\leftarrow$ ,  $\boxed{4_{\text{CH}}}$ ,  $\boxed{3_{\text{DEF}}}$ .

### Web (Menu $\boxed{5_{\text{JKL}}}$ )

The MiniBrowser feature allows you to view internet content, especially designed for your mobile phone. Access and selections within this feature are dependent upon your service provider. For specific information on MiniBrowser access through your phone, contact your service provider.

#### Access and Options



Allows you to initiate a MiniBrowser session.

1. Press Left Soft Key  $\leftarrow$  Menu.
2. Press  $\boxed{5_{\text{JKL}}}$  Web. After a few seconds, you see the Home Page.

## Using Phone Menus

### Ending a MiniBrowser Session


End a MiniBrowser session by pressing .

### Navigating Through the Browser


On-screen items may be presented in one of the following ways:

- **Numbered options**  
You can use your numeric keypad or you can select the items by moving the cursor and pressing the appropriate Soft Keys.
- **Links embedded in content**  
You can act on the options or the links by using the Soft Keys just below the display screen.
- **Text or numbers**  
You can select the items by moving the cursor and pressing the appropriate Soft Keys.

### Scrolling

Use  to scroll through the content if the current page does not fit on one screen. The currently selected item is indicated by a cursor on the screen.

### Fast Scrolling

Press and hold  to quickly move the cursor up and down on the current screen.

### Scrolling by Page

Press the Side Keys to move up and down a page at a time.

### Home Page

To go to the Home Page, press and hold .


### View Browser Menu

Press  to view alert inbox.


### Soft Keys

To navigate to different screens or select special functions, use the Soft Keys. The function associated with the Soft Keys can change for each page and depends on each highlighted item.


#### Left Soft Key



Left Soft Key  is used primarily for first options or selecting an item but its function may change, depending on the content displayed.


#### Right Soft Key

Right Soft Key  is used primarily for secondary options or a menu of secondary options.

### Entering Text, Numbers, or Symbols



When prompted to enter text, the current text entry method appears above the Right Soft Key  as Alpha, Symbol, Number, Word, or Smart.

To change the input mode, press the Right Soft Key . To create an upper case character, use .

The current text method appears above the Right Soft Key  as ALPHA or SMART and allows you to shift input case sensitivity.

## Using Phone Menus


### Clearing Out Text/Number Entered

When entering text or numbers, press  to clear the last number, letter or symbol. Press and hold  to clear the input field completely.

### Using Bookmarks

You can bookmark many individual pages for easy access at a later time. Bookmarks save you time by reducing the number of steps it takes to access a desired page.

### Creating a Bookmark


1. Go to the page that you want to mark.
2. On the browser menu, select bookmark.  
If the page has a title, it is automatically used for the name of the bookmark.
3. Press Left Soft Key Select.  
A message appears confirming that the bookmark is added to the list. The bookmark name is saved and the page is added to the bottom of your list of bookmarks.  
When the bookmark is saved you can change the bookmark name if you choose.
4. Press Left Soft Key  OK to return to the screen that you marked to resume navigation within the MiniBrowser.

This function is dependent upon the html coding of the page and determined by the website.

### Finding a Bookmark

From the Home Page, press and hold the number associated with the bookmark in your bookmark list.

 
### Initiating a Phone Call From MiniBrowser

You can make a phone call from MiniBrowser if the site you are using supports the feature (the phone number may be highlighted and Left Soft Key  appears as Call). The browser connection is terminated when you initiate the call. After you end the call, your phone returns to the screen from which you initiated the call.

## Using Phone Menus

### Downloads (Menu 6<sup>MNO</sup>)

#### Access and Options

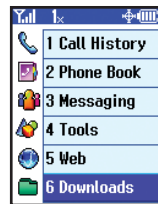

1. Press Left Soft Key  Menu.
2. Press  Downloads.



Downloads allows you to do more than just talk on your phone. Downloads is a technology and service that allows you to download and use applications on your phone. With Downloads, it is quick and easy to personalize your phone to your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, from Ring Tones to games to productivity tools, you can be assured that you can find something useful, practical, or entertaining.

Plus, there are constantly new applications being created for your use.

You can download applications and use Downloads anywhere on your carrier's network, as long as your handset has a digital signal available.

Most applications do not use a network connection while in use. While downloading an application, any incoming calls will automatically be sent to your voicemail, if available. If you do not have voicemail, downloading will not be interrupted by an incoming call, however the caller will receive a busy signal.

When using an application an incoming call will automatically pause the application and allow you to answer the call. When you complete your call, you can resume using the application.

You can personalize your phone by adding new applications and by removing old ones, at any time.

If you need more memory, but still want to be able to access the application later, try using Disable. Disabling keeps the application usage and purchase information, but removes it from memory. To restore an application, go to Options, select the application and click on Restore.

Only removing an application deletes it completely from the memory of the phone. To restore an application once it has been removed will require that you pay and download it again.


Start: allows you to download selected applications while displaying the Downloads application list relayed from the Downloads server in connection. Gives you information about the Downloads selection key.

## Using Phone Menus
 
### Settings (Menu **7**)

The Setup menu has options to customize your phone.

#### Access and Options

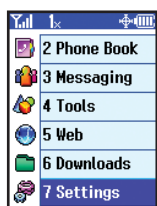

1. Press Left Soft Key **Menu**.
2. Press **7** Settings.
3. Select a sub-menu.



- **1** Sounds
- **2** Display
- **3** Data Setting
- **4** Roaming
- **5** Location
- **6** Messaging
- **7** Security
- **8** Airplane Mode
- **9** Setup/Others
- **0** Phone Info

### Sounds (Menu **7** **1**)

Options to customize the phone's sounds.

#### Ringers (Menu **7** **1** **1**)

Sets ring tones for types of incoming calls.

1. Press **Menu**, **7**, **1**, **1**.
2. Press **1** Voice Calls.  
Select Caller ID / No Caller ID / Roaming.
3. Press **2** Messages.  
Select Voicemail / Page / Text.
4. Use **Navigation** to select a ringer then press **OK** to save the sound.

### Key Tones (Menu **7** **1** **2**)

Allows you to set the Key Tone length and touch tone playback speed.

1. Press **Menu**, **7**, **1**, **2**.
2. Select either of the following then press **OK**.

Short Tones Sends out a tone for a fixed period of time even if you keep the key pressed.

Long Tones Sends out a continuous tone for as long as you keep the key pressed.

**NOTE:** Dual-Tone Multi Frequency (DTMF) Signaling by the simultaneous transmission of two tones, one from a group of low frequencies and another from a group of high frequencies. Each group of frequencies consists of four frequencies. Setting the Key Beep length to Long will extend the DTMF tone.

### Volume (Menu **7** **1** **3**)

Allows you to set various volume settings.

1. Press **Menu**, **7**, **1**, **3**.
2. Select Ringer / Earpiece / Key Beep / Power On / Off / Application.
3. Adjust the volume of the ringer with **Volume** then press **OK** to save the setting.

## Using Phone Menus

Alerts (Menu **7** **1** **4**)

Allows you to set any of the three Alert options to either On or Off.

1. Press **7**, **1**, **4**.
2. Select an alert option.

Service Change (Menu **7** **1** **4** **1**)

Alerts you when service changes. When you enter a service area, the phone displays *Entering Service Area* message. When you leave a service area, the phone displays *Leaving Service Area* message.

Minute Beep (Menu **7** **1** **4** **2**)

Alerts you 10 seconds before the end of every minute during a call.

Call Connect (Menu **7** **1** **4** **3**)

Alerts you when the call is connected.

3. Select an option and press **OK**.
4. Set On / Off with **Left Soft Key** then press **OK**.

Display (Menu **7** **2**)

Options to customize the phone's display screen.

Greeting (Menu **7** **2** **1**)

Allows you to enter a string of up to 16 characters which display on the LCD screen.

1. Press **7**, **2**, **1**.
2. Enter your banner text then press **OK**.

Backlight (Menu **7** **2** **2**)

Allows you to set the duration for illuminating the backlight.

1. Press **7**, **2**, **2**.
2. Choose a Backlight sub-menu and press **OK**.  
**1** Phone / **2** Web

If an amount of time is set for the timer option, the time starts after the last key was pressed.

Screens (Menu **7** **2** **3**)

Allows you to choose the kind of background to be displayed on the phone.

1. Press **7**, **2**, **3**.
2. Select from different screens then press Left Soft Key **Save**.

Contrast (Menu **7** **2** **4**)

Allows you to set the contrast level for your LCD screen.

1. Press **7**, **2**, **4**.
2. Use **Left Soft Key** to adjust the contrast level.
3. Press **OK** key to save the setting.

## Using Phone Menus

Menu Style (Menu **7** **POIS** **2** **ABC** **5** **JKL**)

Allows you to choose whether you want the menu to show as a list or as icons.

1. Press **☞**, **7** **POIS**, **2** **ABC**, **5** **JKL**.
2. Select Icon or List with **⊙** then press **OK**.

Theme Color (Menu **7** **POIS** **2** **ABC** **6** **MNO**)

Allows you to choose the color of the background screen.

1. Press **☞**, **7** **POIS**, **2** **ABC**, **6** **MNO**.
2. Select Blue / Green / Orange / Violet then press **OK**.

Clock (Menu **7** **POIS** **2** **ABC** **7** **POIS**)

Allows you to choose the kind of clock to be displayed on the LCD screen.

1. Press **☞**, **7** **POIS**, **2** **ABC**, **7** **POIS**.
2. Select Normal / Analog / Digital / Dual then press Left Soft Key **☞** Save.

Text Input Font (Menu **7** **POIS** **2** **ABC** **8** **TVY**)

Allows you to set the size and color of the font.

1. Press **☞**, **7** **POIS**, **2** **ABC**, **8** **TVY**.
2. Select Size / Color.
3. Press **⊙** until you find the size or color you desire then press **OK** to save.

Data Setting (Menu **7** **POIS** **3** **DEF**)

This menu allows you to use wireless data communication services. Wireless data communication services refers to the utilization of subscriber terminals for access to the internet with personal computers or laptops at 19.2 Kbps or at a maximum of 230.4 Kbps. The connection speed depends on your carrier's network and other variables. Contact communication information specifications must match the network.

1. Press **☞**, **7** **POIS**, **3** **DEF**.
2. Select Connection / Method / Speed then press **OK**.

Roaming (Menu **7** **POIS** **4** **GHI**)

Set Mode (Menu **7** **POIS** **4** **GHI** **1** **ES**)

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press **☞**, **7** **POIS**, **4** **GHI**, **1** **ES**.
2. Select Home Only / Automatic then press **OK**.

Serving System (Menu **7** **POIS** **4** **GHI** **2** **ABC**)

Allows you to view the channel, and SID.

1. Press **☞**, **7** **POIS**, **4** **GHI**, **2** **ABC**.

## Using Phone Menus

### Location (Menu **7** **FOR** **5** **INT**)

Menu for GPS (Global Positioning System: Satellite assisted location information system) mode.

1. Press **☰**, **7** **FOR**, **5** **INT**.
2. Press **OK** key, then select On/Off.
3. Press **OK** key to save the setting.

**NOTE:** GPS satellite signals are not always received, especially under bad atmospheric and environmental conditions, indoors or otherwise.

### Messaging (Menu **7** **FOR** **6** **MNO**)

With this feature on, new messages are directly displayed, while with this feature off, just alerted when new messages are received.

#### Display Pop-Up (Menu **7** **FOR** **6** **MNO** **1** **ES**)

When message receives, activate pop-up window. When set on, pop-up window is displayed.

1. Press **☰**, **7** **FOR**, **6** **MNO**, **1** **ES**.
2. Select On / Off then press **OK**.

#### Delivery Receipt (Menu **7** **FOR** **6** **MNO** **2** **REC**)

1. Press **☰**, **7** **FOR**, **6** **MNO**, **2** **REC**.
2. Select On / Off then press **OK**.

#### Message Alerts (Menu **7** **FOR** **6** **MNO** **3** **DEF**)

Allows you to select the alert type for a new message.

1. Press **☰**, **7** **FOR**, **6** **MNO**, **3** **DEF**.
2. Select an option then press **OK**.
  - Off / Vib once / Vib & ring / Custom ring / Beep once

#### Auto Delete (Menu **7** **FOR** **6** **MNO** **4** **GHI**)

With this feature on, read messages are automatically deleted when you exceed the storage limit.

1. Press **☰**, **7** **FOR**, **6** **MNO**, **4** **GHI**.
2. Select On / Off then press **OK**.

#### Signature (Menu **7** **FOR** **6** **MNO** **5** **INT**)

Allows you make/edit a signature to automatically send with your messages.

1. Press **☰**, **7** **FOR**, **6** **MNO**, **5** **INT**.
2. Select None / Custom then press **OK**.

#### Callback # (Menu **7** **FOR** **6** **MNO** **6** **MNO**)

Allows you to automatically send a designated callback number when you send a message.

1. Press **☰**, **7** **FOR**, **6** **MNO**, **6** **MNO**.
2. Enter the callback number then press **OK**.

#### Edit Voice Mail Number (Menu **7** **FOR** **6** **MNO** **7** **FOR**)

Allows you to manually enter the access number for Voice Mail Service. This number should be only used when a VMS access number is not provided from the network.

1. Press **☰**, **7** **FOR**, **6** **MNO**, **7** **FOR**.
2. Enter the number then press **OK**.

#### Canned Msgs (Menu **7** **FOR** **6** **MNO** **8** **TUV**)

1. Press **☰**, **7** **FOR**, **6** **MNO**, **8** **TUV**.
2. Use **⬅** to highlight your selection then press **OK** to select.

#### Push Option (Menu **7** **FOR** **6** **MNO** **9** **WXY**)

1. Press **☰**, **7** **FOR**, **6** **MNO**, **9** **WXY**.

## Using Phone Menus






### Security (Menu )

The Security menu allows you to secure the phone electronically.

#### Lock Phone (Menu )





Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls.

You can modify the lock code using the New Lock code within the Security menu.

1. Press , , .
  2. Enter the four-digit lock code.  
The lock code is commonly the last 4 digits of your phone number.
  3. Press  Lock Phone.
  4. Select an option then press .
- |             |  |
|-------------|--|
| Unlock      | The phone is never locked (Lock mode can be used).   |
| Lock        | The phone is always locked.<br>When locked, you can receive incoming calls or make only emergency calls. |
| On Power Up | The phone is locked when it is turned on.  |







#### Change Lock (Menu )

Allows you to enter a new four-digit lock code.

1. Press , , .
2. Enter the four-digit lock code.
3. Press  Change Lock.
4. For confirmation, it will ask you to enter the new lock code again.







### Special # (Menu )

You can call emergency numbers, even when the phone is locked or restricted. To enter 10 emergency numbers:

1. Press , , .
2. Enter the four-digit lock code.
3. Press  Special #.
4. Select emergency number using .
5. Enter an emergency phone number then press .







### Erase Phone Book (Menu )

Allows you to erase all of your Contacts at once.

1. Press , , .
2. Enter the four-digit lock code.
3. Press  Erase Phone Book.
4. Select  Erase all #s then press .

### Reset Default (Menu )

Allows you to reset your phone to the factory default settings.

1. Press , , .
2. Enter the four-digit lock code.
3. Press  Reset Default.
4. Press , select Revert then press .

## Using Phone Menus

### Airplane Mode (Menu **7.FORS** **8.MV**)

Turning Airplane Mode will prevent any incoming and outgoing calls as well as any online access.

1. Press **☰**, **7.FORS**, **8.MV**.
2. Press **OK**, Select On / Off then press **OK**.

### Setup/Others (Menu **7.FORS** **9.MVZ**)

Shortcut (Menu **7.FORS** **9.MVZ** **1.EB**)

Allows you to set a shortcut to Call History, Phone Book, Messaging, Tools, Web, Downloads, Settings, or Planner and their submenus using the Left Navigation key.

1. Press **☰**, **7.FORS**, **9.MVZ**, **1.EB**.  
An explanation message is displayed.
2. Press **OK** to continue.
3. Select the shortcut.

Call Answer (Menu **7.FORS** **9.MVZ** **2.MIC**)

Allows you to determine how to initiate an answered call.

1. Press **☰**, **7.FORS**, **9.MVZ**, **2.MIC**.
2. Select Open/Any Key / Talk Only then press **OK**.

Auto Answer (Menu **7.FORS** **9.MVZ** **3.DEF**)

This feature is intended for use with hands free devices, but is an independent feature of the phone and must be manually turned on/off when connected or disconnected from the device.

1. Press **☰**, **7.FORS**, **9.MVZ**, **3.DEF**.
2. Select an option then press **OK**.
  - Off
  - Car-Kit/Driving

Language (Menu **7.FORS** **9.MVZ** **4.GHI**)

Allows you to set the bilingual feature according to your preference. Choose between English and French.

1. Press **☰**, **7.FORS**, **9.MVZ**, **4.GHI**.
2. Select English / French then press **OK**.

TTY Mode (Menu **7.FORS** **9.MVZ** **5.IJK**)

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press **☰**, **7.FORS**, **9.MVZ**, **5.IJK**.
2. Select TTY On / TTY Off.

One Touch Dial (Menu **7.FORS** **9.MVZ** **6.MNO**)

Allows you initiate a speed dial call by pressing and holding the speed dial digit. If set to Disable, Speed Dial numbers designated in your Contacts will not function.

1. Press **☰**, **7.FORS**, **9.MVZ**, **6.MNO**.
2. Select Enable / Disable then press **OK**.

### Phone Info (Menu **7.FORS** **0.NEXT**)

The Phone Info menu provides you with specific information pertaining to your phone model.

 
1. Press **☰**, **7.FORS**, **0.NEXT**.

## Using Phone Menus

### Planner (Menu **8**)

The Setup menu has options to customize your phone.

#### Access and Options

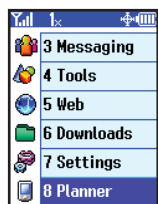

1. Press Left Soft Key **Menu**.
2. Press **8** Planner.
3. Select a sub-menu.
  - **1** Schedule
  - **2** Alarm Clock
  - **3** Notepad



- Moves cursor to the left.
- Moves cursor to the right.
- Moves to the previous week.
- Moves to the next week.

3. Press Left Soft Key **Add**.
4. Enter your schedule information including:
  - Date
  - Time
  - Title/information
  - Recurring event
  - When to ring the alarm reminder
  - Which ring alarm to sound
5. Press Left Soft Key **Save**.

**NOTE:** Scheduler will not alert you during a call, when transmitting SMS, or when connecting up. After exiting, it will sound the reminder.

### Schedule (Menu **8** **1**)

Allows you to keep your agenda convenient and easy to access. Simply store your appointments and your phone alerts you with a reminder of your appointment.

*Short Cut: Pressing the Navigation key **Up** to the Upper from standby mode is a hot key to Schedule.*

1. Press **Menu**, **8**, **1**.
2. Use **Up** to highlight the scheduled day.

### Alarm Clock (Menu **8** **2**)

Allows you to set one of four alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, *Alarm 1* (or 2 or 3, as applicable) will be displayed on the LCD screen and the alarm will sound.

1. Press **Menu**, **8**, **2**.
2. Select the alarm you want to edit.  
**1** Alarm 1 / **2** Alarm 2 / **3** Alarm 3 / **4** Quick Alarm

## Using Phone Menus

3. Use  to highlight the alarm time then press .
4. Set the time for alarm and press Left Soft Key  Save.
5. Use  to highlight Once (recurring setting).
6. Press  to select one of the following:  
Once / Daily / Mon - Fri / Weekends
7. Use  to highlight Ring (ring type setting) and press .
8. Use  to select one of the available alarm ring types and press .
9. Press Left Soft Key  Save.

### Notepad (Menu )

Allows you to read, add, edit, and erase notes to yourself.

1. Press , , .
2. Press Left Soft Key  Add to write a new note.

## Safety

### TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

#### Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out Radio Frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*

NCRP Report 86 (1986)

ICNIRP (1996)

Health Canada, Safety Code 6, 1999.

American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). The design of your phone complies with the FCC guidelines, IC Regulations (and those standards).

#### Antenna Care

Use only the supplied or an approved replacement antenna. Unauthoriaed antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

#### Phone Operation

**NORMAL POSITION:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

## Safety

### Tips on Efficient Operation

For your phone to operate most efficiently:

Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

### Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law so require.

### Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

### Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

### Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) Optional for each phone manufacturer.

### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

### Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

### Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

### Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

## Safety

### Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

### For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

### Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.

### Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- Do not dispose of your battery in fire or with hazardous or flammable materials.
- Never store your phone in temperatures less than -4° F or greater than 122° F.
- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.

- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.

### Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user's guide in an accessible place at all the times after reading it.

#### Explosion, Shock, and Fire Hazards

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal's teeth, nails, come into contact with the battery. There is a risk of this causing a fire.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.

## Safety

- Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.
- Do not use your phone in high explosive areas as the phone may generate sparks.
- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Never place your phone in a microwave oven as it will cause the battery to explode.

### General Warnings and Cautions

- Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- Store the battery in a place out of reach of children.
- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Do not hold or let the antenna come in contact with your body during a call.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.

## Safety



### FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

#### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

#### 2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

#### 3. What kinds of phones are the subject of this update?

The term "wireless phone" refers here to handheld wireless phones with built-in antennas, often called "cell", "mobile", or "PCS" phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

## Safety

### 4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

### 5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

### 6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency energy (RF).

The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

### 7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

## Safety

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head.

Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be

discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a "compatible" phone and a "compatible" hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones  
(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications Commission (FCC) RF Safety Program  
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection  
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project  
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)  
(<http://www.nrpb.org.uk>)

variations in measurements.

## Safety

### Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government, and Industry Canada of the Canadian Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC/IC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC/IC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC/IC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC/IC for each model.

The highest SAR value for this model phone when tested for use at the ear is 1.17 W/kg and when worn on the body, as described in this user guide, is 0.621 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC/IC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJLX5400. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>.

- \* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability.



AC-100

### AC Adapter

The AC adaptor, model AC-100 or 8102, allows you to power your phone using.

Input Voltage: AC100-240V 50/60Hz 0.2A-

Output Voltage: DC 5V, 1A



Standard

### Battery

Two batteries are available. The standard battery, and the extended battery.



### Cigarette Lighter Charger

The cigarette lighter charger allows you to operate the phone and trickle charge the phone's battery from your vehicle. It takes 5 hours to charge a completely discharged battery.



### Hands-Free Car Kit (Portable)

The hands-free car kit enables you to attach the phone to the power jack in your car, providing you with hands-free operation. It can charge a completely discharged battery in 5 hours.



### Headset

Connects to your phone, allowing hands-free operation. Includes earpiece, microphone, and integrated call answer / termination button.

(Model Headset 1000)



### USB Converter Cable

The USB cable, enables you to connect your phone to your PC.

## Warranty Information

### 1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the unit and enclosed accessories shall be a period of one (1) year from the date of original purchase. The remaining warranty period for the unit being repaired or replaced shall be determined by presentation of the original sales receipt for the purchase of the unit.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser / end user.
- (3) The limited warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories, and all Canadian Provinces.
- (4) The external housing and cosmetic parts shall be free of major defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information satisfactory to LG to prove the date of purchase or exchange.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

### 2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the product in other than its normal and customary manner.
- (2) Defect or damage from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, or spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) Alleged defects or malfunctions of the product if the Customer

Service Department at LG was not notified by the consumer during the applicable limited warranty period.

- (5) Products, which have had the serial number, removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including but not limited to any implied warranty of marketability merchantability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

### 3. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG INFOCOMM U.S.A., INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

### 4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in the continental United States:

Tel. 1-800-793-8896 or visit [www.lgeservice.com](http://www.lgeservice.com). Please call or write for the location of the LGE authorized service center nearest you and the procedures for obtaining warranty claims.

## Index

### A

AC Adapter 94  
Accessories 94  
Add New Entry 47  
Adding or Changing the Group 28  
Airplane Mode 74  
Alarm Clock 77  
Alerts 66  
Auto Delete 71

### B

Backlight 67  
Battery 94  
Battery Information and Care 82

### C

Calculator 56  
Call History 43  
Call Timer 45  
Call Waiting 20  
Caller ID 21  
Canned Msgs 71  
Change Lock 72  
Changing the Default Number 32  
Charger and Adapter Safety 82  
Check Accessories 7  
Cigarette Lighter Charger 94  
Clock 68  
Consumer Information on SAR 92

Contents 1  
Contrast 67

### D

Data Setting 69  
Delivery Receipt 70  
Display 66  
Display Pop-Up 70  
Downloads 62  
Driving 80

### E

Editing Contacts Entries 31  
Electronic Devices 80  
Erase 55  
Erase Calls 45  
Erase Phone Book 73  
EZ Tips 56

### F

FCC Part 15 Class B Compliance 8  
FCC RF Exposure Information 10  
Find Name 46

### G

Greeting 66  
Getting Your Phone Started 16  
Groups 48

### H

Hands-Free Car Kit 94  
Headset 95  
Health Care Facilities 81  
Hearing Aids 81

### I

Important Information 7  
Inbox 52  
Incoming Calls 44

### K

Key Tones 65

### L

Language 75  
Location 70  
Lock Phone 72

### M

Making a Call From Your Phone's Memory 40  
Menu Style 68  
Menus Overview 14  
Message Alerts 70  
Messaging 49, 70  
Missed Calls 44  
Mute Function 20

### N

New Message Alert 49  
Notepad 78

### O

Options to Customize Your Contacts 28  
Other Medical Devices 81  
Outbox 53  
Outgoing Calls 44

### P

Pacemakers 80  
Phone Book 46  
Phone Info 75  
Phone Numbers With Pauses 36  
Phone Operation 79  
Phone Overview 12  
Planner 76  
Push Option 71

### R

Recent Calls 43  
Reset Default 73  
Ringers 64  
Roaming 69

## Index

### S

Schedule 76  
Screens 67  
Screen Icons 18  
Searching Your Phone's  
Memory 38  
Security 72  
Send Message 50  
Serving System 69  
Set Mode 69  
Settings 64  
Setup/Others 74  
Shortcut 74  
Signature 71  
Sounds 64  
Special # 73  
Speed Dialing 21  
Speed Dials 47

### T

Technical Details 8  
Text Input Examples 24  
Text Input Font 68  
The Battery 16  
The Basics of Storing  
Contacts Entries 26  
Theme Color 68  
TIA Safety Information 79  
Tools 56  
TTY Mode 75

### U

USB Converter Cable 95  
Using Bookmarks 60

### V

Vehicles 81  
Voicemail 55  
Volume 65  
Volume Quick Adjustment 20

### W

Warranty Information 96  
Web Msg 52  
Welcome 7  
World Clock 57

P/N: MMBB0127301 Date: 04. 10.13